

# RCA VISYS™

## 4 Line Multi-Handset Office System User's Guide



Please read this manual before  
operating this product for the first time.

Model 25450

## Important Information

---

### Important Information Equipment Approval Information

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

#### 1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

#### Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

#### 2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

### Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

### Hearing Aid Compatibility

This telephone system meets FCC standards for Hearing Aid Compatibility.

US NUMBER IS LOCATED ON THE CABINET BOTTOM  
REN NUMBER IS LOCATED ON THE CABINET BOTTOM

### Licensing

Licensed under US Patent 6,427,009.

# Important Information



---

## FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.”

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the belt clip supplied with this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

**WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

 <p>THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF “DANGEROUS VOLTAGE” INSIDE THE PRODUCT.</p>	<p><b>CAUTION:</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
<p>SEE MARKING ON BOTTOM / BACK OF PRODUCT</p>		

### Introduction



**CAUTION:** *When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the IMPORTANT SAFETY INSTRUCTIONS provided with this product and save them for future reference.*

Congratulations on your purchase of the RCA 25450 Telephone System. The RCA 25450 Telephone System was built to satisfy a variety of business and residential needs. A prominent feature of the RCA 25450 is the two-way radio which gives you the flexibility to add remote handset phones anywhere there is an A/C electrical outlet.

The RCA 25450 Telephone System functions like a PBX office system. Calls are handled in a way that offer similar privacy.

The RCA 25450 is ready to go out of the box. This user guide will cover the basics to get you started, explain the advanced features of the telephone, and show you how to tailor the RCA 25450 to your specific needs.

To get the most from your new phone, we suggest that you take a few minutes right now to read through this user's guide.

**NOTE:** *The ringer timing in this system may ring in a different sequence than other types of phone systems connected to the same line(s).*

**IMPORTANT:** *In order to use all of the features of this unit, you must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service. To know who is calling while you are on the phone, you must subscribe to Call Waiting Caller ID Service.*

**IMPORTANT:** *Because cordless phones operate on electricity, you should have at least one phone in your business or home that isn't cordless, in case the power goes out.*

# Table of Contents

IMPORTANT INFORMATION .....	2	SOFT BUTTONS.....	19
EQUIPMENT APPROVAL INFORMATION .....	2	MENU SYSTEM.....	19
INTERFERENCE INFORMATION.....	3	REDIAL BUTTON .....	20
HEARING AID COMPATIBILITY .....	3	LINE BUTTONS .....	20
LICENSING .....	3	LINE DEDICATE.....	20
FCC RF RADIATION EXPOSURE STATEMENT .....	4	PRE-DIALING.....	20
INTRODUCTION .....	5	SPEAKER BUTTON .....	21
IMPORTANT INSTALLATION INFORMATION.....	9	HEADSET BUTTON.....	21
SAFETY PRECAUTIONS .....	9	MUTE BUTTON .....	21
INSTALLATION GUIDELINES.....	9	PAGE BUTTON.....	21
TELEPHONE JACK REQUIREMENTS.....	10	FLASH BUTTON .....	21
PARTS CHECKLIST (BASE UNIT).....	11	HOLD BUTTON .....	21
PARTS CHECKLIST (CORDLESS HANDSET) .....	12	DND (Do Not Disturb) BUTTON.....	21
PHONE INSTALLATION (BASE UNIT) .....	13	EXIT BUTTON .....	22
BASE UNIT LOCATION.....	13	MEMORY BUTTONS .....	22
INSTALLING BACKUP BATTERY.....	13	STORE BUTTON.....	22
INSTALLING HANDSET .....	13	DIRECTORY.....	22
INSTALLING THE AC ADAPTOR.....	14	INTERCOM BUTTON.....	22
CONNECTING THE TELEPHONE LINE CORDS.....	14	RESET BUTTON .....	22
TWO 2-LINE JACKS .....	15	AUTO ATTENDANT BUTTON.....	22
FOUR 1-LINE JACKS.....	15	VOICE MAIL BUTTON .....	23
CORDLESS HANDSET INSTALLATION .....	16	CALL TRANSFERRING.....	23
INSTALLING THE CHARGING CRADLE AND AC ADAPTOR.....	16	HOLD MESSAGE.....	23
INSTALLING THE CORDLESS HANDSET BATTERY .....	16	CONFERENCE CALLING.....	23
INSTALLING THE CHARGING CRADLE WALL MOUNT.....	17	SECOND INCOMING CALL.....	23
REGISTERING THE CORDLESS HANDSET.....	17	CALLER ID .....	23
BASE UNIT LAYOUT.....	18	CALL WAITING.....	24
BASE UNIT FEATURES .....	19	CORDLESS HANDSET FEATURES .....	24
LCD DISPLAY.....	19	LCD DISPLAY (CORDLESS HANDSET) .....	24
NAVIGATION BUTTON.....	19	CORDLESS HANDSET LAYOUT.....	25

## Table of Contents

CORDLESS HANDSET CHARGING CRADLE LAYOUT .....	26	PUTTING CALL(S) ON HOLD .....	39
END/POWER BUTTON .....	27	MUTE.....	40
TALK BUTTON.....	27	CALL FORWARDING (CORDLESS HANDSET).....	41
SOFT BUTTONS.....	27	TRANSFERRING A CALL TO ANOTHER EXTENSION.....	42
MENU SYSTEM (ADJUST SETTINGS AND REGISTRATION) .....	27	INTERCOM CALLS .....	45
REDIAL SOFT BUTTON.....	27	MAKING AN INTERCOM CALL.....	45
PRE-DIALING.....	27	RECEIVING AN INTERCOM CALL.....	46
NAVIGATION BUTTON.....	27	END AN INTERCOM CALL.....	47
SPEAKER BUTTON.....	28	IGNORE AND OVERRIDE AN INCOMING LINE OR INTERCOM CALL .....	47
HEADSET JACK.....	28	PAGING (BASE UNIT).....	49
MUTE.....	28	<b>VOICE MAIL (VM) .....</b>	<b>50</b>
HOLD .....	28	CONFIGURE VOICE MAIL (BASE UNIT) .....	50
EXIT BUTTON .....	28	RESET EXTENSION PASSWORD (BASE UNIT).....	51
VOICE MAIL BUTTON .....	29	CLEAR ALL VM BOX MESSAGES (BASE UNIT) .....	52
VOICE MAIL INDICATOR LIGHT .....	29	VOICE MAIL BOX MANAGEMENT OPTIONS (BASE UNIT).....	52
INTERCOM BUTTON.....	29	VOICE MAIL BOX MANAGEMENT OPTIONS (CORDLESS HANDSET) .....	57
CALL FORWARDING .....	29	VOICE MAIL BOX MANAGEMENT OPTIONS (OFFSITE).....	59
CONFERENCE CALLING .....	29	ACCESS VOICE MAIL (BASE UNIT) .....	60
SECOND INCOMING CALL.....	29	ACCESS VOICE MAIL (CORDLESS HANDSET) .....	64
CALLER ID .....	30	ACCESS VM (OFFSITE LOCATION).....	67
CALL WAITING.....	30	<b>DIRECTORY.....</b>	<b>69</b>
EXTENSION GROUPS .....	30	NAVIGATE DIRECTORY .....	69
<b>USING YOUR RCA 25450 PHONE SYSTEM .....</b>	<b>31</b>	<b>ADVANCED FUNCTIONS OF YOUR RCA 25450 PHONE SYSTEM .....</b>	<b>72</b>
MAKING A CALL .....	31	AUTO ATTENDANT (BASE UNIT) .....	72
MAKING A CALL (BASE UNIT).....	31	CONFIGURE AUTO ATTENDANT (BASE UNIT) .....	73
REDIAL (BASE UNIT).....	33	HOLD MESSAGE (BASE UNIT) .....	76
MAKING A CALL (CORDLESS HANDSET) .....	34	SPEED DIAL (BASE UNIT).....	78
RECEIVING A CALL (BASE UNIT).....	37	THREE-WAY CONFERENCE CALLS .....	79
CALL WAITING.....	38	SECOND INCOMING CALL .....	82
ENDING A CALL (BASE UNIT).....	38	EXTENSION GROUP SETTING (CORDLESS HANDSET) .....	83
SWITCHING BETWEEN AUDIO MODES.....	39	CALL LOG.....	84

# Table of Contents

---

<b>SETTINGS AND ADJUSTMENT</b> .....	<b>87</b>	<b>GENERAL PRODUCT CARE</b> .....	<b>116</b>
MENU SYSTEM.....	87	CAUSES OF POOR RECEPTION.....	116
BASE UNIT SETUP.....	88	INTERFERENCE INFORMATION.....	117
LINE DEDICATE (BASE UNIT).....	89	<b>SERVICE INFORMATION</b> .....	<b>118</b>
SOUND (BASE UNIT).....	90	<b>LIMITED WARRANTY</b> .....	<b>119</b>
CORDLESS HANDSET SETUP.....	94	<b>WALL MOUNTING BRACKET TEMPLATE FOR CORDLESS HANDSET</b> .....	<b>121</b>
REGISTER CORDLESS HANDSET (BASE UNIT AND CORDLESS HANDSET).....	94	<b>ACCESSORY INFORMATION (REPLACEMENT PARTS)</b> .....	<b>123</b>
DEREGISTER CORDLESS HANDSET (BASE UNIT AND CORDLESS HANDSET).....	95		
CLEAR CORDLESS HANDSET ID (BASE UNIT).....	96		
NEXT CORDLESS HANDSET ID (BASE UNIT).....	97		
SOUND (CORDLESS HANDSET).....	98		
PHONE SETTINGS.....	101		
DIALING PREFIX.....	101		
AREA CODES.....	102		
CONTRAST (BASE UNIT).....	104		
SET TIME (BASE UNIT).....	104		
DO NOT DISTURB (DND) (BASE UNIT).....	105		
AUTO OR MANUAL LINE SELECTION SETTINGS (CORDLESS HANDSET).....	106		
RESET SYSTEM (BASE UNIT).....	108		
HEADSET AND BELT CLIP OPERATION.....	109		
REPLACING THE BATTERIES.....	110		
Cordless Handset Battery.....	110		
Handset Memory Retention.....	110		
Base Unit Battery.....	111		
Battery Safety Precautions.....	111		
<b>OTHER INFORMATION</b> .....	<b>112</b>		
DISPLAY MESSAGES.....	112		
SOUND SIGNALS.....	113		
<b>TROUBLESHOOTING TIPS</b> .....	<b>113</b>		
CALLER ID.....	114		
TELEPHONE.....	114		



### Important Installation Information

#### Safety Precautions

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals, unless the telephone line is disconnected from the network.
- Use caution when installing or modifying telephone lines.
- Temporarily disconnect any equipment connected to the phone such as faxes, other phones, or modems.

#### Installation Guidelines

- Install the base unit near a telephone (modular) jack and an electrical outlet.
- Avoid sources of noise, such as a window by a busy street, and electrical noise, such as motors, microwave ovens, and fluorescent lighting.
- Avoid heat sources, such as heating air ducts, heating appliances, radiators, and direct sunlight.
- Avoid areas of excessive moisture or extremely low temperature.
- Avoid dusty locations.
- Avoid other cordless telephones or personal computers.


**CAUTION:** *Always disconnect all phone cords from the Base Unit before battery installation or replacement.*

**INSTALLATION NOTE:** *Some cordless telephones operate at frequencies that may cause or receive interference with TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave ovens, or VCR. If such interference continues, move the cordless telephone farther away from appliances. Certain other communications devices may also use the 900 MHz frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone. If you are concerned with interference, please refer to the owner's manual for these devices on how to properly set channels to avoid interference. Typical devices that may use the 900 MHz frequency for communication include wireless audio/video senders, wireless computer networks, multi-handset cordless telephone systems, and some long-range cordless telephone systems.*

**INSTALLATION NOTE:** *If the 25450 Phone System shares a phone line with another type of phone system, the Auto Attendant and Voice Mail features may be interrupted. You may want to turn off Auto Attendant and Voice Mail for that line.*


### Telephone Jack Requirements

To use this phone, the user will need either two RJ14 (two line) or four RJ11 (one line) modular jacks in order to supply this unit with 4 phone lines. The modular jacks which may look like the one shown here. If you don't have a modular jack, call your local phone company to find out how to get one installed.

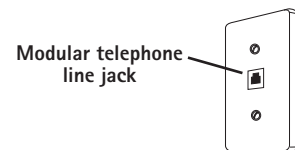

### Parts Checklist (Base Unit)

Make sure your package includes the following items:

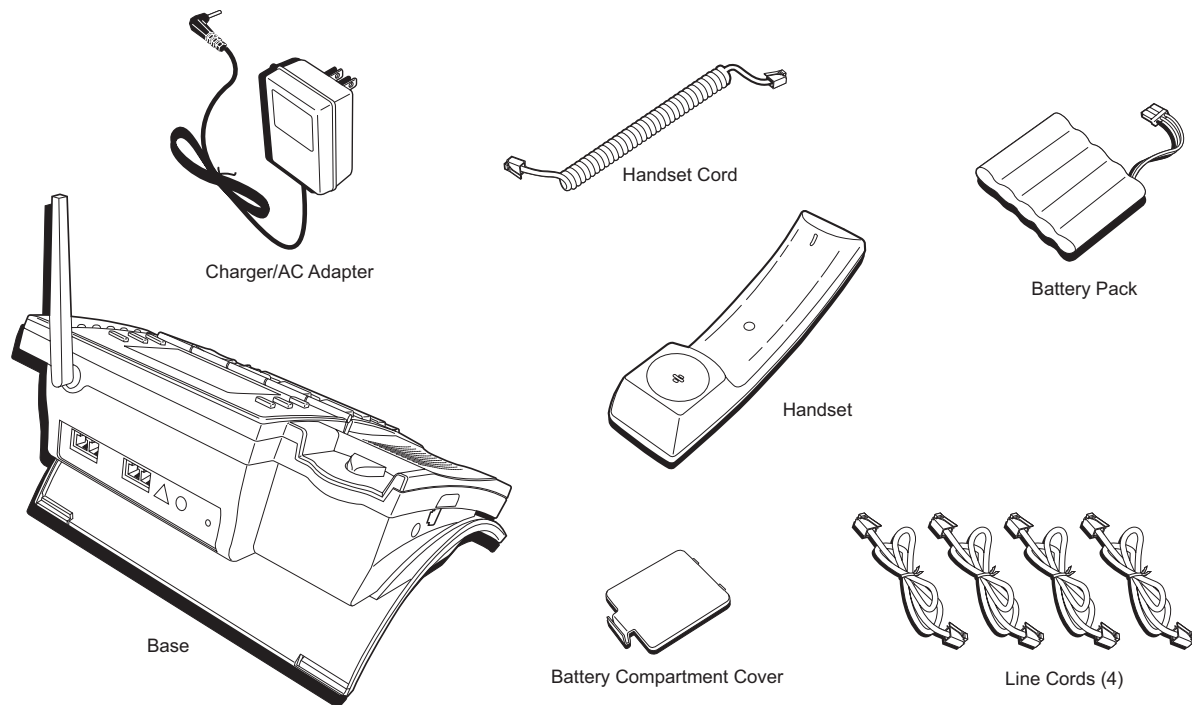


## Connections and Setup

---

### Parts Checklist (Cordless Handset)


Make sure your package includes the following items:

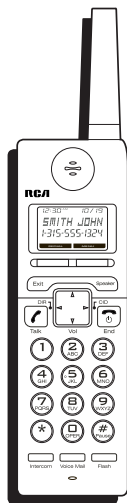


Cordless  
Handset



Belt Clip

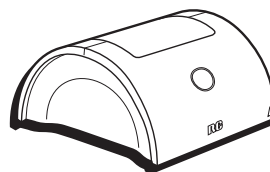


Charging  
Cradle

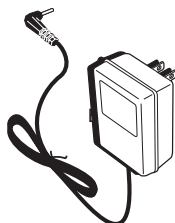


Charger/AC Adapter



Battery Compartment Cover

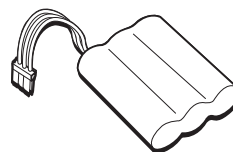

Battery Pack

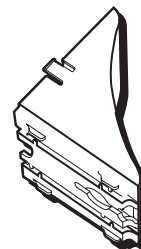

Charging  
Cradle Bracket

### Phone Installation (Base Unit)

#### Base Unit Location

Place your phone on a level surface, such as a tabletop or desk, near an electrical outlet and telephone wall jack. For the best performance, place the base unit at least 3 feet away from other electronic devices such as a computer or a fax machine. Raise the antenna after the installation is complete.

#### Installing Backup Battery

The backup battery can provide 30 minutes of normal operation in the event of a power failure. Use only the supplied RCA Nickel Metal Hydride (Ni-MH) Base Unit backup battery.


1. Locate the battery compartment cover and battery pack packaged separately.
2. Plug in the battery pack as shown.
3. Snap the battery compartment cover in place.
4. Charge the backup battery for 10 hours before the first use.

**NOTE:** If the low battery icon appears in the display when electrical power is on, replace the rechargeable batteries. It is important to replace them as soon as possible to maintain unit operation when electrical power is off. As a precaution, you may want to write down any stored information you do not want erased.

**IMPORTANT:** If you are not going to use the telephone for more than 30 days, remove the batteries because they can leak and damage the unit.

#### Installing Handset

Connect one end of the Handset cord to the Handset and the other end to the Handset jack located on the left side of the Base Unit. Use only supplied RCA 25450 Handset.

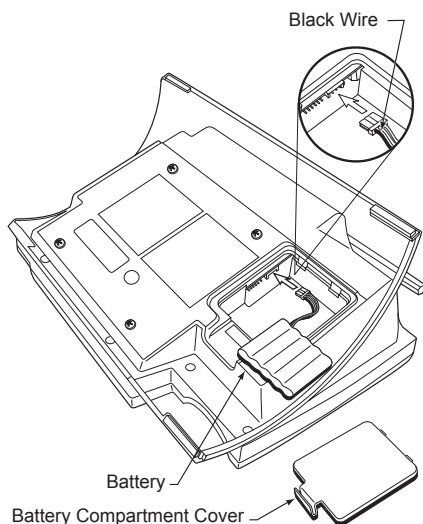

## Connections and Setup

### Installing the AC Adaptor

Plug the transformer end of the Base Unit AC adaptor (7.5VDC) into a standard AC electrical power outlet, plug the other end into the "Power 7.5VDC" jack on the back of the Base Unit.

### Connecting the Telephone Line Cords


#### Two 2-line Wall Jacks (Type RJ-14)

1. Plug one end of a straight telephone line cord into the jack on the base labeled as "L2/L1" and the other end into the two-line wall jack you are using for lines 1 and 2.
2. Plug one end of a straight telephone line cord into the jack on the base labeled as "L4/L3" and the other end into the two-line wall jack you are using for lines 3 and 4.


#### Four 1-line Wall Jacks (Type RJ-11)

1. Plug one end of a telephone line cord into the jack on the base labeled as "L2/L1" and the other end into the wall jack you are using for line 1.
2. Plug one end of a telephone line cord into the jack on the base labeled as "L2" and the other end into the wall jack you are using for line 2.
3. Plug one end of a telephone line cord into the jack on the base labeled as "L4/L3" and the other end into the wall jack you are using for line 3.
4. Plug one end of a telephone line cord into the jack on the base labeled as "L4/Data" and the other end into the wall jack you are using for line 4.


**IMPORTANT:** If you want to connect another device (such as a modem or fax machine), use the jack on the phone labeled "L4/Data". A call picked up on Line 4 at another extension may interrupt fax, modem, or message transmissions. You must also disable the Auto Attendant and Voice Mail features for Line 4 as these will also interrupt fax, modem or message transmissions. If your wall jack is RJ-14 where two lines are integrated into one jack, you will need a splitter for the L4/Data port.

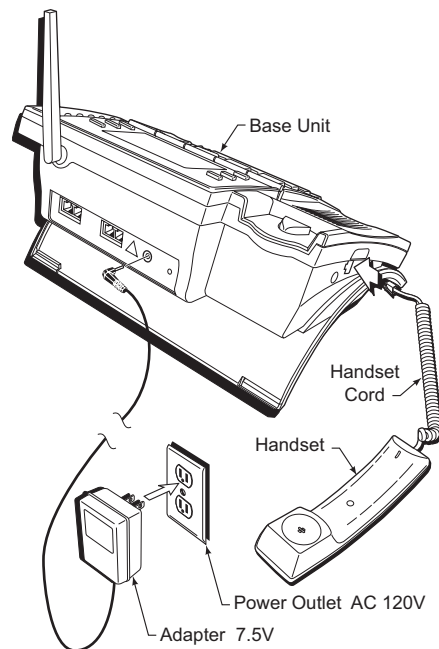

## Two 2-line Jacks (Using 4-Wire Line Cords Supplied)

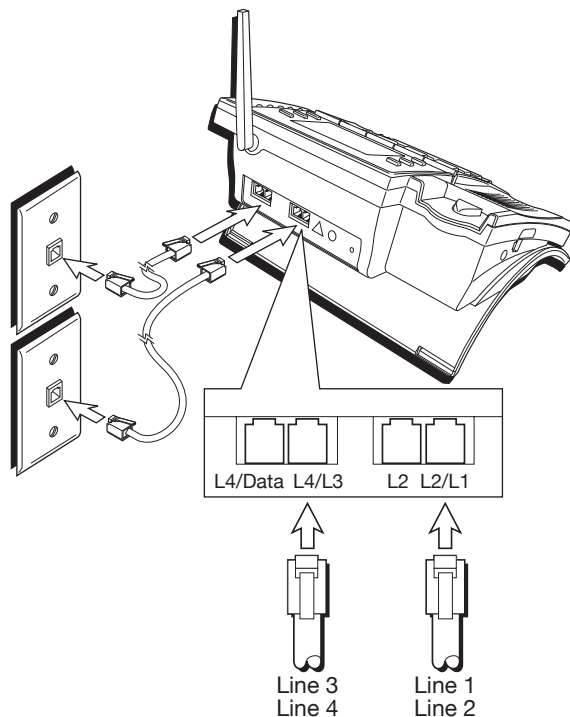

## Four 1-line Jacks

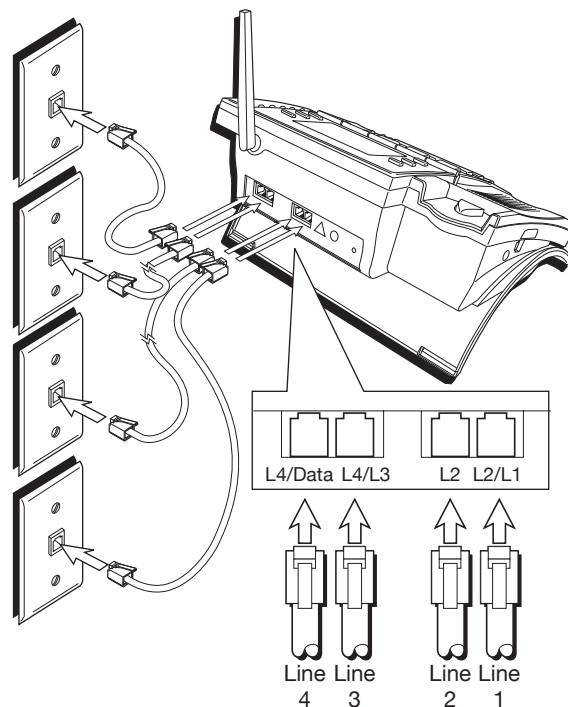

## Connections and Setup

### Cordless Handset Installation

#### Installing the Charging Cradle and AC Adaptor

Plug the transformer end of the AC Adaptor into a standard AC electric power outlet, plug the other end into the "Power 5.5VDC In" jack on the back of the Charging Cradle.

#### Installing the Cordless Handset Battery


1. Locate the back cover and battery pack packaged separately from the Handset.
2. Insert the battery pack and connect the plug on the battery pack to the jack inside the compartment. Use only the supplied RCA Nickel Metal Hydride (Ni-MH) battery.

**NOTE:** It is important to maintain the polarity (black and red wires) to the jack inside the compartment. To ensure proper battery installation, the connector is keyed and can be inserted only one way.

3. Close the battery compartment by pushing the back cover up until it snaps into place.
4. Place the handset in the charging cradle. Charge the battery for 12 hours before the first use.

**NOTE:** Allow the handset battery to properly charge (for 12 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised.

**NOTE:** The Cordless Handset may feel warm to the touch after charging.

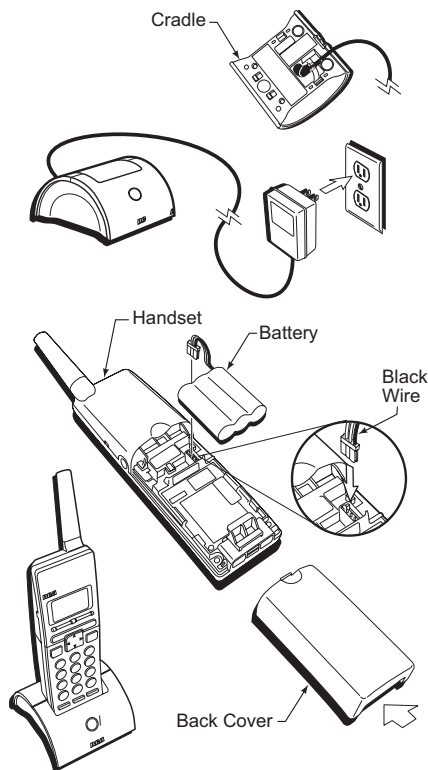




### Installing the Charging Cradle Wall Mount

Choose a mounting location at least 10-1/2" clearance above the top screw hole.


1. Cut out the Charging Cradle Wall Mount Template. See page 121.
2. Hold the template against the wall and mark the mounting screw positions.
3. Drill holes in wall using appropriate size drill bit.
4. Insert anchor screws into the wall. We recommend #8 pan head screws. Allow 3/16" space between screw heads and wall.
5. Press the AC adapter cord in the cord channel of the wall bracket. Allow approximately 3" of cord past the end of the channel.
6. Insert the round connector on the AC adapter cord into the connection on the bottom of the charging cradle.
7. Insert the front tabs of the bracket in the square holes of the charging cradle. Swing the cradle down to snap it in place. Make sure the AC adapter cord is not pinched between the cradle and the mount.
8. Mount the assembly to the wall.
9. Plug the AC Adapter into a power outlet.
10. Insert the cordless handset into the cradle. Charge the battery for 12 hours before the first use.

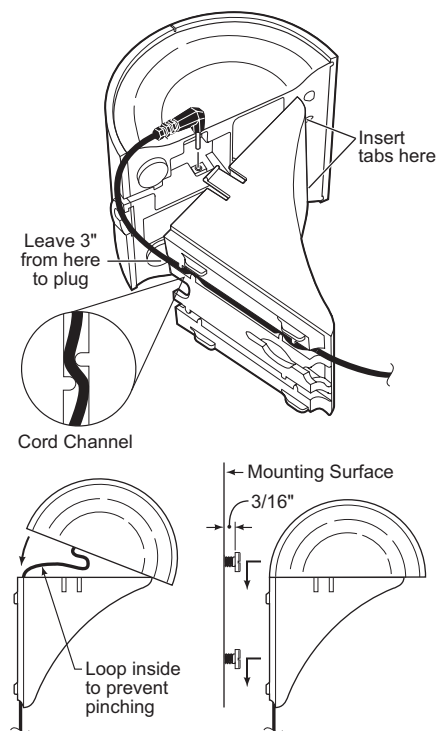


### Registering the Cordless Handset

Cordless Handsets purchased separately must be registered with the Base Unit before using. If the Cordless Handset was purchased with the Base Unit as a system, it has already been registered. Refer to the Settings and Adjustments section in this User's Guide for instructions on registration.



## Base Unit Layout

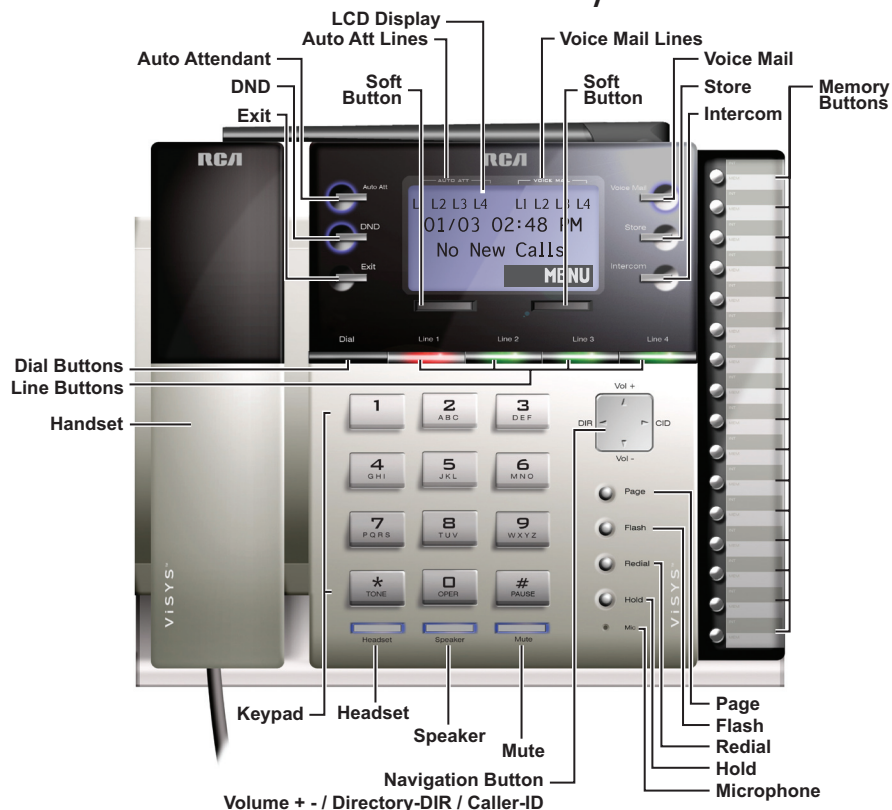

Display shown in Standby Mode  
(The phone is not handling calls or being programmed)

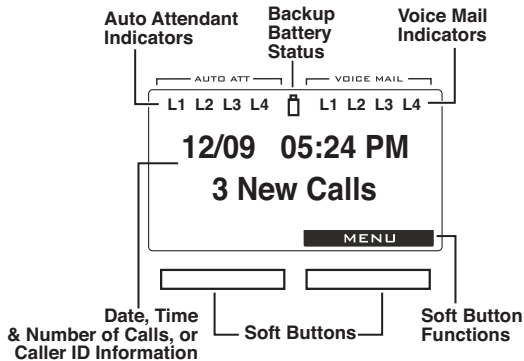

Arrows on Display Indicate Scrolling Available by Using Navigation Button

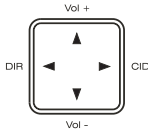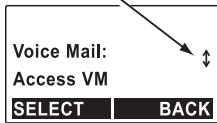

## Base Unit Features

### LCD Display

The Display shows several functions and menu items of the phone system.

The first line of the display can show the Auto Attendant and Voice mail ON/OFF indicators and backup battery status, or Caller ID, date and time, or messages.

The second and third lines can show Caller ID information, messages, menu selections, or editable characters.

The last line can show the various left and right soft button functions.

*NOTE: When the system is not handling calls or being programmed, the LCD Display is in Standby Mode.*

### Navigation Button

Press ▲ and ▼ to scroll through records and menu selections on the display, adjust ringer volume during standby mode (phone idle), and adjust the Handset/Receiver, Speakerphone or Headset voice volume during a call. Press ◀ and ▶ to move the cursor on the Display during number and name editing, and to access Caller ID or Directory functions during Standby Mode.

### Soft Buttons

The function of each Soft Button changes according to what is shown in the Display above it. Press to perform the function shown above the soft button.

### MENU System (Adjust Settings and Registration)

Use the Menu system by pressing the **MENU** soft button to access adjustments for sound settings, display settings, system settings, and to register Cordless Handsets.

*NOTE: You must exit the Menu System before you can make a call.*

## Features

---

### Redial Button

Allows you to dial the last ten (10) numbers called. You can use the Navigation Button up/down arrows to scroll through the last 10 numbers dialed.

### Line Buttons (4)

Four line buttons are available. Dual-colored lights in each **Line** button indicate:

- Line is idle (light off)
- Base Unit is ringing (flashing green quickly)
- Cordless Handset is ringing (flashing red quickly)
- Base Unit is on hold (flashing green slowly)
- Cordless Handset is holding a call (flashing red slowly)
- Base Unit in use (constant green)
- Cordless Handset in use (constant red)

### Line Dedicate

The line dedicate function allows an extension (Base Unit or Cordless Handset) to be dedicated to a line.

### Dial Button

Pressing the **Dial** button accesses an available telephone line and dials the number on the display. This allows users to pre-dial a number or review Caller ID records or Directory entries before dialing the number.

### Pre-Dialing

Allows you to enter a phone number before lifting the handset, pressing the **Speaker**, **Headset**, **Dial**, or **Line (1-4)** buttons to make a call.

### **Speaker Button**

Allows you to talk to a caller hands free using the Speakerphone. The Speakerphone remains in use unless you pick up the Handset or press the Headset button.

### **Headset Button**

Allows you to talk to a caller using a headset. The headset jack supports a standard 2.5 mm plug. The Headset operation remains for the duration of the call until you press the Speaker button or you pick up the Handset.

*NOTE: If the headset is disconnected during a call, the call remains active unless the person on the line hangs up, or you press the Headset button again.*

### **Mute Button**

Allows you to temporarily turn off the microphone on the Handset/Receiver, Headset, or Speakerphone during a call so the person on the line cannot hear you.

### **Page Button**

Pages all Cordless Handsets. Each Cordless Handset can be paged individually using a Memory Button.

### **Flash Button**

Sends a signal to a phone line to retrieve a dial tone after you end a call, or to perform the call waiting feature provided by your local phone company during a call.

### **Hold Button**

Allows you to temporarily suspend a call up to 30 minutes.

### **DND (Do Not Disturb) Button**

Press to activate a silent ring on all incoming calls, The DND button flashes if Do Not Disturb is turned on.

## Features

---

### Exit Button

Returns to the Standby Mode on the Display. Any unsaved changes will be discarded.

### Memory Buttons

There are 16 buttons on the right panel that can have dual functions. They can be used for one-touch paging to a Cordless Handset, or as **Speed Dial** buttons for external phone numbers.

### Store Button

Press to store speed dial numbers into the **Memory** buttons.

### Directory

The Directory allows you to store up to 100 names and numbers.

### Intercom Button

Places an intercom call to an extension (Cordless Handset) or Group ID.

### Reset Button

Located on the back of the Base Unit, this button is indented to prevent accidental reset. Press to reset the Base Unit to factory settings. All Voice Mail, Auto Attendant, Caller ID, and Directory records will be erased. All Cordless Handsets will need to be re-registered if the Base Unit is reset.

### Auto Attendant Button

Auto Attendant is an automated call answering feature that uses recorded messages to direct calls to extensions or voice mails. This allows you to leave the Base Unit unattended. Auto Attendant can be turned on and off on each line. You can record a separate message for each line or use the default recordings.

### **Voice Mail Button**

### **Call Transferring**

Allows you to move a call from one extension to another.

### **Hold Message**

Accessed through the Menu soft button, the Hold Message function allows the user to record, play, or delete a message for callers placed on hold.

### **Conference Calling**

The conference call function allows a caller from the Base Unit or a Cordless Handset to add a third person to a call. The call must include at least one outside line.

### **Second Incoming Call**

Alerts you of a new call from a different line by a tone when you are on the phone. Allows you to toggle between calls.

### **Caller ID**

Contact your local phone company to subscribe to this feature. The phone system receives and displays Caller ID information transmitted by your local phone company. This information may include the phone number, date and time. The unit can store up to 50 calls.

## Features

---

### Call Waiting

Contact your local phone company to subscribe to this feature. This feature allows you to see on the Display who is calling when you hear a call waiting confirmation tone.

**NOTE:** *The call waiting tone is audible only to the extension that is on the line. No other extension will hear the tone or can answer the call.*

### Cordless Handset Features

#### LCD Display (Cordless Handset)

The LCD display has a LED (Light Emitting Diode) for backlighting. The LED dims after 10 seconds of inactivity.

The first line of the Display can show the Caller ID, time and date, or can show the following status icons from left to right:

**RSSI (Receive Signal Strength Indicator)** - During a call, the number of bars is proportional to the radio signal strength received


**Line Indicators** - Indicate the line number(s) being accessed or held.

**Handset ID** - Displays a 2-digit Handset ID

**Battery Strength Indicator** - Number of bars is proportional to the amount of battery time remaining. Indicates charging when in charger cradle

The second and third lines can show status, Caller ID information, message, menu selections, or editable characters.

The last line shows various left and right Soft Button functions.

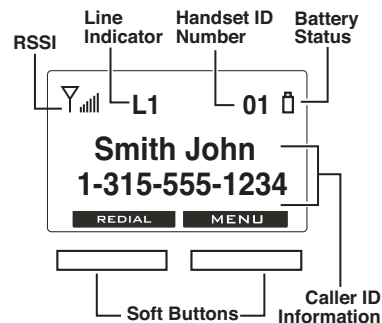



## Cordless Handset Layout



### Cordless Handset Charging Cradle

**Cordless Handset  
shown on  
Charging Cradle  
with Wall Bracket**




**Charging Cradle**

**Contacts**



**Charging Cradle  
Wall Bracket**

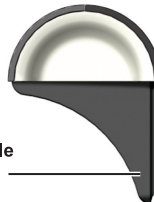

**Charging Cradle  
shown without  
Wall Bracket**



## End/Power Button

Press to end a call. Press for 3 seconds to turn the handset power ON or OFF.

## Talk Button

Press to place a phone call, answer an incoming phone call, or make an intercom call through the receiver or headset. The receiver or headset remains in use unless the **Speaker** button is pressed.

## Soft Buttons

The function of each Soft Button changes according to what is shown in the Display above it. Press to perform the function above the Soft Button.

## MENU System (Adjust Settings and Registration)

Use the Menu system by pressing the **MENU** soft button to adjust sound settings, phone settings, and to register Cordless Handsets.

## Redial Soft Button

Allows you to dial the last ten (10) numbers called. You can use the Navigation Button **▲** or **▼** arrows to scroll through the last 10 numbers.



## Pre-Dialing

Allows you to enter a phone number before accessing a telephone line by pressing the **Talk** or **Speaker** button.

## Navigation Button

Press **▲** or **▼** to scroll through records and menu selections on the Display, adjust ringer volume during Standby Mode, and adjust the Cordless Handset receiver, Speakerphone or Headset voice volume during a call. Press **◀** or **▶** to move the cursor on the Display during number and name editing, and to access Caller ID or Directory functions during Standby Mode.

Arrows on Display Indicate Scrolling Available by Using Navigation Button

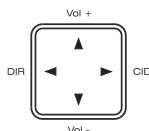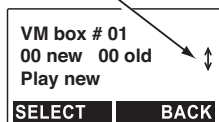

## Features

---

### Speaker Button

Press the **Speaker** button to activate the Speakerphone and make a call, answer an incoming call, or make an intercom call. You can toggle between the speakerphone mode and the receiver by pressing the **Talk** or **Speaker** buttons. To end a call, press the **End** button.

### Headset Jack

Allows you to plug in a headset. The headset jack supports a standard 2.5 mm headset plug.

### Mute

Available through the **MUTE** soft button. During a call, allows you to temporarily turn off the microphone on the Cordless Handset, headset, or speakerphone so the person on the line cannot hear you.

### Flash Button

Press to send a signal to a phone line to retrieve a dial tone after you end a call, or to perform the call waiting feature provided by local phone companies during a call.

### Hold

Available through the **OPTION** soft button during a call. Allows you to temporarily suspend a call up to 30 minutes.

### Exit Button

Returns to the Standby Mode display. Any unsaved changes will be discarded.

### **Voice Mail Button**

Allows you to access the Voice Mail system to play new or old messages or to change your voice mail options.

### **Voice Mail Indicator Light**

Flashes when there are unheard voice mail messages.

### **Intercom Button**

Press to place an intercom call to an extension (Cordless Handset ID or Base Unit ID) or a Group ID.

### **Call Forwarding**

Allows you to forward future incoming calls from your extension to an external phone number.

### **Call Transferring**

Allows you to move a call from one extension to another.

### **Conference Calling**

The conference call function allows a caller from the Base Unit or a Cordless Handset to add a third person to a call. The call must include at least one outside line.

### **Second Incoming Call**

Alerts you of a new call from a different line by a tone when you are on the phone. Allows you to toggle between calls.

## Features

---

### Caller ID

Contact your local phone company to subscribe to this feature. The phone system receives and displays Caller ID information transmitted by your local phone company. This information may include the phone number, date and time. The unit can store up to 50 calls.

### Call Waiting

Contact your local phone company to subscribe to this feature. This feature allows you to see on the Display who is calling when you hear a call waiting tone.

**NOTE:** *The call waiting tone is audible only to the extension that is on the line. No other extension will hear the tone or can answer the call.*

### Extension Groups

This feature allows several Cordless Handset users to be called or paged at the same time as one group. The first Handset user to answer receives the call. There are four group ID numbers (91-94) available for Cordless Handset users.

**NOTE:** *The Base Unit always belongs to all groups*

For example, if several Cordless Handset users in a sales department decide to be called as a group, each Cordless Handset subscribes to the same group ID number. Outside and Intercom calls can be directed to that "sales" group ID number.

Auto Attendant recordings can also direct calls to Extension Groups. For example, you could record an Auto Attendant message to say; *"To speak with someone in sales, press 91"*.

### Using Your RCA 25450 Phone System

Your RCA 25450 Phone System comes ready to use. This section details the basic operation of the Base Unit and Cordless Handset, including instructions on making, receiving and ending a call, call waiting, switching between audio modes, putting a call on hold, muting, call forwarding, transferring a call, and using the intercom.

#### Making a Call

Calls can be made using Base Unit handset, Cordless Handset, Headset, or Speakerphone. A call duration timer will display the length of the call after the connection is established.

#### Making a Call (Base Unit)

##### Auto Line-Selection Dial (Base Unit)

The Auto Line-Selection dial function allows the user to make a call without choosing a phone line. An available line is automatically selected.

1. Press the **Dial**, **Speaker** or **Headset** button (when a Headset is plugged in), or pick up the Handset (off-hook).

**NOTE:** To cancel dialing at any time, press the **Speaker**, or **Headset** button again, or return the handset to the cradle.

2. If all usable phone lines are not available, the display will show "No line available."
3. If a phone line is available, the phone will enter talk mode and the display will show "Press REDIAL or dial number", or the display will show the dialing prefix if it is enabled by the phone setting menu. The Speakerphone, Headset, or Handset will be turned on.
4. Press the Redial button to redial the last number called, or enter the phone number using the keypad (0-9, \*, #).

**Press REDIAL or  
dial number**

# Using Your RCA 25450 Phone System

---

## Manual Line Selection Dial (Base Unit)

The manual line-selection function allows you to choose a phone line to make a call.

1. Press a Line button (1-4).

**NOTE:** To cancel at any time, press the **Speaker** button or return the Handset to the Cradle.

2. If the phone line selected is not connected or is in use, it will show "Line (1-4) is not available". If the phone line selected is dedicated to a Cordless Handset, it will show "Line (1-4) is dedicated to ext # (01 - 16)". If the phone line selected is available but system resources such as voice channel are not available, it will show "System busy".
3. Otherwise, the phone will enter talk mode and the display will show "Press REDIAL or dial number" or the dialing prefix if it is enabled via phone setting menu. To use the Handset, lift it from the cradle. If the Handset is in the cradle, the speakerphone will be turned on.
4. Press the Redial button to redial the last number called, or enter the phone number using the keypad (0-9, \*, #).

## Pre-Dialing (Base Unit)

The pre-dial function allows you to enter the number before accessing a phone line.

1. To pre-dial a number, enter the phone number using the keypad (0-9, \*, #) while in Standby Mode.
2. Use the **CLEAR** and **DELETE** soft buttons to edit the number entered. The **DELETE** soft button erases the last digit entered. The **CLEAR** soft button erases the whole number but remains in the dialing mode.
3. Press the **Dial**, **Speaker**, or **Headset** button (when a Headset is plugged in), or pick up the handset (off-hook) to make an auto-line selection dial; or press Line (1-4) to make a manual line selection dial.

Press REDIAL or  
dial number

555-562-9823\_

**CLEAR** **DELETE**



**NOTE:** You can toggle between the Headset, Speakerphone and Handset/Receiver by pressing the corresponding buttons or lifting the Handset/Receiver.

4. If the dialing prefix function is enabled via phone setting menu, the dialing prefix will be inserted before the phone number entered.
5. Before the auto or manual line-selection dial is made, an incoming call takes priority and will cancel the pre-dialing.

### Redial (Base Unit)

The redial function allows the user to dial a number from the last 10 numbers dialed.

1. To redial a number, press the **Redial** button. The last phone number will be displayed.

**NOTE:** If the Redial log is empty, the Redial display will show "Redial log empty" and return to Standby Mode in 5 seconds.

2. Press **▲** or **▼** on the **Navigation** button to scroll through the last 10 numbers dialed.
3. Press the **Dial**, **Speaker** or **Headset** (when a headset is plugged in) button, or pick up the handset (off-hook) to make an auto line-selection dial; or press **Line** (1-4) to make a manual line-selection dial. The phone number shown will be sent.
4. Before the auto or manual line-selection dial is made, an incoming call takes priority and will cancel the redial.

Dialed #1: ↑	
555-677-2859	
299254	
SAVE	DELETE

↓

Delete? ↑	
555-677-2859	
299254	
YES	NO

### To Delete a Number from the Redial Log (Base Unit)

1. Press the **Redial** Button. The last phone number will be displayed.
2. Press **▲** or **▼** on the **Navigation** button to scroll to the number to be deleted.
3. To delete a number from the Redial log, press the **DELETE** soft button. Press the **YES** soft button to delete (a confirmation tone will sound) or the **NO** soft button to keep it in the Redial log.

## Using Your RCA 25450 Phone System

---

### To Save a Number from the Redial Log to Directory (Base Unit)

1. Press the Redial button.
2. Press ▲ or ▼ on the **Navigation** button to scroll to the number to be saved.
3. Press **SAVE** soft button.
4. Enter a name, and then save the number. Please refer to Directory section for detailed operation.

### Making a Call (Cordless Handset)

Press and hold the **End** button to turn on the Cordless Handset. You will hear a confirmation tone and see the display when the Handset is on. Calls can be made by pressing the **Talk** or **Speaker** buttons or plugging in a headset.

### Auto Line-Selection Dial (Cordless Handset)

The Auto Line-Selection Dial function allows the user to dial a phone number without first choosing a line. An available line is automatically selected.

1. Press the **Talk** or **Speaker** button.

**NOTE:** To cancel dialing at any time, press the **End** button.

2. The display will show "Press REDIAL or dial number" or the dialing prefix if it is enabled via the phone setting menu.
3. Press the **REDIAL** soft button to redial the last number called, or enter the phone number using the keypad (0-9, \*, #).
4. If the Cordless Handset can not establish a connection to the Base Unit after 15 seconds, it will show "No connection". If all usable phone lines are not available, it will show "No line is available". If there are usable phone lines available but all system resources are in use, the display will show "System busy".
5. Otherwise, it will enter talk mode. The corresponding receiver, headset, or speakerphone will be turned on.

6. If the Cordless Handset loses the connection with the Base Unit due to interference, it will try to re-establish the connection for 10 seconds and the display will show *"Re-establishing connection ..."*
7. If the connection is re-established, it will enter talk mode. Otherwise, the display will show *"Connection lost"* for 5 seconds and return to the standby screen.

### Manual Line-Selection Dial (Cordless Handset)

The manual line-selection dial function allows the user to choose a phone line to make a call.

1. Press the Talk or Speaker button. It will show *"Connecting ..."*

**NOTE:** *To cancel dialing at any time, press the End button.*

2. If the Cordless Handset can not establish a connection to the Base Unit after 15 seconds, the display will show *"No connection"*. If all usable phone lines are not available, it will show *"No line is available"*. If there are usable phone lines available but system resources are busy, the display will show *"System busy"*.
3. Otherwise, the display will show phone lines that are available at the time. Use the keypad (1-4) to select a line.
4. If the phone line selected is unavailable, it will show *"Line (1-4) is in use"*.
5. Otherwise, it will enter talk mode and the display will show *"Press REDIAL or dial number"* or the dialing prefix if it is enabled via phone setting menu and the corresponding receiver, headset or speakerphone will be turned on.
6. Press the **Redial** button to redial the last number called, or enter the phone number using the keypad (0-9, \*, #).
7. If the Cordless Handset loses the connection with the Base Unit due to interference, it will try to re-establish the connection for 10 seconds and show *"Re-establishing connection ..."*

## Using Your RCA 25450 Phone System

---

8. If the connection is re-established, it will enter talk mode. Otherwise, the display will show *"Connection lost"* for 5 seconds and go back to standby screen.

### Pre-Dialing (Cordless Handset)

The Pre-Dialing function allows you to enter the number before accessing a phone line.

1. To pre-dial a number, enter the phone number using the keypad (0–9, \*, #) while in Standby Mode.
2. Use the **CLEAR** and **DELETE** soft buttons to edit the number entered. The **DELETE** soft button erases the last digit entered. The **CLEAR** soft button erases the entire line but remains in the pre-dialing mode.
3. Press the **Talk** or **Speaker** button to make auto or manual line-selection dial.
4. If the dialing prefix function is enabled via phone setting menu, the dialing prefix will be inserted before the phone number entered.
5. Before the auto or manual line-selection dial is made, an incoming call takes priority and will cancel the pre-dialing.



### Redial (Cordless Handset)

The redial function allows the user to dial a number from the last 10 numbers dialed.

1. To redial a phone number, press the **REDIAL** soft button. The last phone number dialed will be displayed.

**NOTE:** *if the redial log is empty, it will return to standby display in 5 seconds after displaying "Redial log empty".*

2. Press **▲** or **▼** on the **Navigation** button to scroll through the last 10 numbers dialed.
3. Press the **Talk**, or **Speaker** button to make an auto or manual line-selection dial. The phone number shown will be sent.

4. Before the auto or manual line-selection dial is made, an incoming call takes priority and will cancel the redial.

### To Delete a Number from the Redial Log (Cordless Handset)

1. Press the **REDIAL** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll to the number to be deleted.
3. Press **DELETE** soft button. Then press the **YES** soft button to delete it or press the **NO** soft button to keep it in the redial log.

### To Save a Number from the Redial Log to Directory (Cordless Handset)

1. Press the **REDIAL** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll to the number to be saved.
3. Press **SAVE** soft button.
4. Enter a name, and then save the number. Please refer to Directory section for detailed operation.

## Receiving a Call (Base Unit)

1. The Base Unit will ring when there is an incoming call for it. The corresponding **Line (1-4)** button will flash (fast) green.
2. The display will show "Incoming call from line (1-4)", then Caller ID information when available. "Private" or "Unknown" may show on the display if the caller's information has been blocked by the caller or the originating phone company.

**NOTE:** *If there is more than one incoming call and intercom call for the Base Unit, only the first one's information will be shown.*

3. Press the **Line Button** corresponding to the flashing **Line Status LED**, press the **Speaker** or **Headset** button or lift the Handset/Receiver to start the conversation. If desired, press the **SILENT** soft button to ignore and silence the ringer.

**NOTE:** *The **SILENT** soft button applies only to the current call.*

## Using Your RCA 25450 Phone System

---

### Receiving a Call (Cordless Handset)

1. The Cordless Handset will ring and/or vibrate when a call is received. The display will show *"Incoming call from line (1-4)"*, then Caller ID information if available. *"Private"* or *"Unknown"* may show on the display if the caller's information has been blocked by the caller or the originating phone company.

**NOTE:** *If there is more than one incoming call and intercom call for the Cordless Handset, only the first one's information will be shown.*

2. Lift the Cordless Handset from the charging cradle and press the **Talk** button to answer. Press the **Speaker** button for speakerphone operation. Press the **SILENT** soft button to ignore the call.

**NOTE:** *The **SILENT** soft button applies only to the current call.*

3. To switch between handset and speakerphone: press the **Speaker** button to switch to speakerphone; press the **Talk** button to switch to handset.
4. To end the call, press the **End** button.

### Call Waiting

To use this feature, you must subscribe to a Caller ID with a Call Waiting Service.

When you are on the phone and you are receiving another call, you will hear a tone and the display will show who is calling. Press the **Flash** button to put the person whom you are talking to on Hold and answer the incoming call. Press the **Flash** button again to switch between calls.

### Ending a Call (Base Unit)

To end a handset call, put the handset in the cradle. To end a speakerphone call, press the **Speaker** button. To end a headset call, press the **Headset** button.

### Ending a Call (Cordless Handset)

To end a receiver call, a headset call or a speakerphone call, press the **End** button or place the Cordless Handset in charging cradle.

### Switching Between Audio Modes

During a call, you can switch among the following audio modes: handset call (Base Unit only), receiver call (Cordless Handset only), speakerphone call and headset call.

#### Base Unit

1. To switch to handset call, pick up the handset.
2. To switch to speakerphone call, press the **Speaker** button, then put the handset back on the cradle if it was handset call.
3. To switch to headset call, press the **Headset** button, then put the handset back on the cradle if it was handset call.

*NOTE: A headset must be plugged in; otherwise error tone will be heard.*

#### Cordless Handset

1. To switch to receiver call from headset call, unplug the headset.
2. To switch to headset call from receiver call, plug in the headset.
3. To switch to receiver or headset call from speakerphone call, press **Talk** button.
4. To switch to speakerphone call, press **Speaker** button.

### Putting Call(s) on Hold

The hold function allows the user to temporarily suspend a call up to 30 minutes. This function is also used when setting up a conference call (Please refer to Three-Way Conference Calls for details).

## Using Your RCA 25450 Phone System

---

When a call is on hold, the extension that put the call on hold will remind the user with 3 short beeps every 30 seconds. The caller will hear a pre-recorded hold message every 15 seconds (Please refer to "Hold Message" for details).

A call on hold can only be taken off hold by the extension that originally put it on hold. The system will automatically end the call if the caller hangs up or it has been put on hold for more than 30 minutes.

### Base Unit

1. To put a call on hold, press the **Hold** button. The display will show "Call(s) on hold" and the corresponding Line (1-4) button will flash (slow) green.
2. To resume the call, press the corresponding Line (1-4) button.

### Cordless Handset

1. To put a call on hold, press the **OPTION** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll to the "Hold" option.
3. Press the **SELECT** soft button. The display will show the call on hold and the corresponding Line (1-4) button on Base Unit will flash (slow) red.
4. To take a call off hold, press the corresponding **UNHOLD** soft button.
5. Press **▲** or **▼** on the **Navigation** button to scroll to the desired line to unhold.
6. Press **SELECT** soft button.

**NOTE:** The Cordless Handset must be within the Base Unit's coverage area to resume a call. Otherwise, it will fail and the display will show "No connection".

### Mute

The Mute function allows a user to temporarily silence the outgoing voice (turn off the microphone) during a call.



### Base Unit

1. To mute the call, press the **Mute** button. Mute is effective only for the current call.
2. To unmute the call, press the **Mute** button again.

### Cordless Handset

1. To mute the call, press the **MUTE** soft button. Mute is effective only for the current call.
2. To unmute the call, press the **UNMUTE** soft button.

### Call Forwarding (Cordless Handset Only)

The Auto Attendant feature on the Base Unit must be on for Call Forwarding to function. The call forwarding function allows calls directed to a specific extension to be transferred to another phone number. The Cordless Handset must be able to connect with the Base Unit to change the setting. Intercom calls are not forwarded. A warning message will appear on the Cordless Handset display that all calls are being forwarded. Setting a new call forwarding phone number will automatically replace the previous number.

*NOTE: Each Cordless Handset that has Call Forwarding enabled will use 2 phone lines; one for the incoming call and one for when the call is forwarded.*

*NOTE: The Cordless Handset must be within the Base Unit's coverage area to set up call forwarding. Otherwise, it will fail with a "No connection" message.*

### Enable Call Forwarding

1. To enable call forwarding, press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to locate the "Phone setting" option.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to locate the "Call forward" option.

## Using Your RCA 25450 Phone System

---

5. Press the **SELECT** soft button.
6. Press ▲ or ▼ on the **Navigation** button to locate the *"Enable"* option.
7. Press the **SELECT** soft button.
8. Enter or edit a phone number using the keypad (0–9, \*, #). Use the **DELETE** soft button to erase the last digit entered.
9. Press the **SAVE** soft button. A confirmation tone will sound. The display will show *"Calls forwarded"* after 15 seconds.

### Disable Call Forwarding

1. To disable call forwarding, press the **MENU** soft button.
2. Press ▲ or ▼ on the **Navigation** button to locate the *"Phone setting"* option.
3. Press the **SELECT** soft button.
4. Press ▲ or ▼ on the **Navigation** button to locate the *"Call forward"* option.
5. Press the **SELECT** soft button.
6. Press ▲ or ▼ on the **Navigation** button to locate the *"Disable (default)"* option.
7. Press the **SELECT** soft button.

### Transferring a Call to Another Extension

The Call Transfer function allows the user to move a call from one extension to another. There are two types of call transfer: Announced and Unannounced.

#### Announced Call Transfer

Announced call transfer allows the user to talk to the person that will receive the transfer before actually transferring the call.

### Base Unit

1. To make an announced call transfer, press the **XFER** soft button.

*NOTE: To cancel call transfer at any time, press the **CANCEL** soft button.*

2. Enter a valid two-digit extension, or extension group using the keypad (0–9, \*, #), or press a **Memory** (1 – 16) button for one-touch paging. It will page the selected extension(s).
3. If the paging is not answered for 30 seconds, the call transfer will be cancelled, and it will show "Paging out" for a few seconds.
4. After the paged extension (or one of the paged extensions) picks up and talks, end the call to complete the announced call transfer.

### Cordless Handset

1. To make an announced call transfer from the Cordless Handset, press the **OPTION** soft button.
2. Press **▲** or **▼** on the **Navigation** button to locate the "Xfer" option.
3. Press the **SELECT** soft button.

*NOTE: To cancel call transfer at any time, press the **CANCEL** soft button.*

4. Enter a valid two-digit extension, or extension group using the keypad (0–9, \*, #). The Cordless Handset will page the selected extension(s).
5. If the paging is not answered for 30 seconds, the call transfer will be cancelled, and the display will show "Paging out" for a few seconds.
6. After the paged extension (or one of the paged extensions) picks up and talks, end the call to complete the announced call transfer.

## Using Your RCA 25450 Phone System

---

### Unannounced Call Transfer

Unannounced call transfer allows the user to transfer the call without talking to the person who will receive the transfer. If an unannounced call transfer is not answered, the call will be handled by Auto Attendant if it is turned on. The call will go to Voice Mail if Voice Mail is turned on and Auto Attendant is turned off. The call will keep ringing if both Auto Attendant and Voice Mail are turned off.

#### Base Unit

1. To make an unannounced call transfer, press the **XFER** soft button.  
*NOTE: To cancel call transfer at any time, press the **CANCEL** soft button.*
2. Enter a valid two-digit extension, or extension group using the keypad (0-9, \*, #), or press a **Memory** (1 – 16) button for one-touch paging. The Base Unit will page the selected extension(s).
3. End the call to complete the unannounced call transfer.

#### Cordless Handset

1. To make an unannounced call transfer, press the **OPTION** soft button.
2. Press **▲** or **▼** on the **Navigation** button to locate the "Xfer" option.
3. Press the **SELECT** soft button.  
*NOTE: To cancel call transfer at any time, press the **CANCEL** soft button.*
4. Enter a valid two-digit extension, or extension group using the keypad (0-9, \*, #). The Cordless Handset will page the selected extension(s).
5. End the call to complete the unannounced call transfer.
6. If the paged extension is busy, the incoming call will be connected to voice mail.

### Intercom Calls

Intercom calls allow extensions to communicate with each other internally. They can be made to a single extension, group, or the Base Unit can page all extensions.

There are two types of intercom calls between Cordless Handsets: one is normal intercom which can be made without the presence of the Base Unit if there are no calls held by the Cordless Handset; the other is a Base Unit assisted intercom which is made when there are calls held by the Base Unit. Base Unit assisted intercom is used to set up a conference call (Please refer to Three-Way Conference Calls for details).

### Making an Intercom Call

An intercom call can be made to a specific extension, or an Extension Group, or all extensions (Base Unit only). If an intercom call is made to an Extension Group or all extensions, the first extension to answer will be connected. Intercom paging will time out after 30 seconds if there is no answer and the display will show *"Paging timeout"* for a few seconds.

#### Base Unit

1. Press one of the sixteen one-touch Memory (1 – 16) buttons for Cordless Handset (01–16); or
2. Press the Intercom button followed by a two-digit Cordless Handset ID (01–16) or an Extension Group ID (91–94); or
3. Press the **Page** button for all Cordless Handsets.
4. If system resources are busy, the display will show *"System busy"*. If the handset is not in the cradle, it will be turned on. Otherwise, the speakerphone will be turned on.

**NOTE:** *If the Cordless Handset ID entered is not registered, the user will hear an error tone.*

**NOTE:** *To cancel an intercom call before a valid extension or extension group is entered, press the Exit button; otherwise press the Speaker button, or return the handset to the cradle.*

# Using Your RCA 25450 Phone System

---

## Cordless Handset

1. Press the **Intercom** button followed by a two-digit Cordless Handset ID (01-16) or an Extension Group ID (91-94);
2. If it is a Base Unit assisted intercom call and system resources are busy, the display will show "System busy". Otherwise, the handset receiver or headset will be turned on.

**NOTE:** To cancel an intercom call at any time, press the **End** button.

Enter Ext #:  
##

## Receiving an Intercom Call

### Base Unit

1. The Base Unit will ring when receiving an intercom call. The display will also show "Incoming page from Ext # (01-16)".

**NOTE:** If there is more than one incoming call and intercom calls for the Base Unit, only the first call's information will be shown.

2. Press the **SILENT** soft button or the **DND** button to turn the ringer off.

**NOTE:** The **SILENT** soft button only turns off the ringer for the current call. The **DND** button turns off the ringer for the current and all following calls. Press the **DND** button again to turn on the ringer.

3. Press the **Speaker or Headset** (when a headset is plugged in) button, or pick up the handset to answer the intercom call shown in the display.

Incoming page  
from Ext #12

**SILENT** | **OPTION**

### Cordless Handset

1. When an intercom call arrives, the Cordless Handset will ring and/or vibrate. The display will show the caller's Extension ID (00-16).

**NOTE:** If there is more than one incoming call and intercom calls for the Cordless Handset, only the first call's information will be shown.

Incoming page  
from Ext #12

**SILENT** | **OPTION**

2. Press the **SILENT** soft button to turn off the ringer or vibrator if you wish to ignore the call.

**NOTE:** The **SILENT** function is valid only for the current call.

3. Press the **Talk** or **Speaker** button to answer the intercom call shown in the display.

### End an Intercom Call

#### Base Unit

To end a handset call, put the handset in the cradle. To end a speakerphone call, press the **Speaker** button. To end a headset call, press the **Headset** button.

#### Cordless Handset

To end a receiver call, a headset call or a speakerphone call, press the **End** button or place the Cordless Handset in charging cradle.

### Ignore and Override an Incoming Line or Intercom Call

#### Base Unit (Making an Outbound Line Call)

During an incoming or intercom call ring, the user can ignore the call and make an outbound telephone call.

1. Press the **OPTION** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Line call" appears on the display.
3. Press the **SELECT** soft button. The speakerphone will turn on and you will hear the dial tone.
4. Enter the telephone number and the number dialed will begin to ring.
5. If desired, the handset receiver may be lifted and used or the **Headset** button can be pressed to use the headset mode.

## Using Your RCA 25450 Phone System

---

### Base Unit (Making an Outbound Intercom Call)

During an incoming or intercom call ring, the user can ignore the call and make an outbound intercom call.

1. Press the **OPTION** soft button.
2. Press **▲** or **▼** on the **Navigation** button until *"Intercom"* appears on the display.
3. Press the **SELECT** soft button. The display will prompt you for the extension number.
4. Enter an extension number (01-16) or press one of the one-touch buttons to page a specific extension or press the **Page** button to page all extensions.
5. If the page is answered, this becomes an intercom call.

### Cordless Handset (Making an Outbound Line Call)

During an incoming or intercom call ring, the user can ignore the call and make an outbound telephone call.

1. Press the **OPTION** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Line call"* appears on the display.
3. Press the **SELECT** soft button. The speakerphone will turn on and you will hear the dial tone.
4. Enter the telephone number and the number dialed will begin to ring.



### Cordless Handset (Making an Outbound Intercom Call)

During an incoming or intercom call ring, the user can ignore the call and make an outbound intercom call.

1. Press the **OPTION** soft button.
2. Press **▲** or **▼** on the **Navigation** button until *"Intercom"* appears on the display.
3. Press the **SELECT** soft button. The display will prompt you for the extension number.
4. Enter an extension number (01-16) to page the extension.
5. If the page is answered, this becomes an intercom call.

### Paging (Base Unit)

The **Page** button on the Base Unit is a one-touch button to intercom (page) all cordless handsets.

1. Press the **Page** button. The display shows *"Paging All..."* if the Base Unit is not busy. Otherwise, the display shows *"System busy"*.
2. The Cordless Handsets will display *"Incoming page from Ext #00"*.
3. The Base Unit will connect to the first Cordless Handset to answer. Press the **Talk** or **Speaker** button on the Cordless Handset to answer the page.
4. To end the page, hang up or press the **Speaker** button if the speakerphone is on. The Cordless handset can also end the page by pressing the **End** button.





### Voice Mail (VM)

The Base Unit and every Cordless Handset connected to the system has its own voice mailbox. Each Cordless Handset has a mailbox number that is the same as its ID/extension number. The Base Unit has the mailbox number "00". The system can hold up to 100 minutes of messages with each message having a limit of 64 seconds.

**NOTE:** The default password is "0000". Use this password when setting up voice mail for the first time, or after the password has been reset by the administrator.

### Configure Voice Mail (Base Unit)

1. Press the **Voice Mail** button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Configure VM" appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options to select which line to configure for voice mail. Auto attendant must be turned off to change the configuration. The display will show "VM can only be configured when AA is off" if auto attendant is on.
5. Press the **SELECT** soft button.
6. The display will show whether voice mail is on and the number of rings before caller is directed to voice mail.
7. To change configuration, press the **CHANGE** soft button.
8. First select "On (Default)" to enable or "Off" to disable.
9. Press the **SELECT** soft button.
10. If voice mail is on, the display will prompt the user to select number of rings before the caller is directed to voice mail. Press **▲** or **▼** on the **Navigation** button, make selection (2–6).

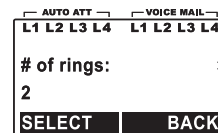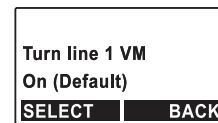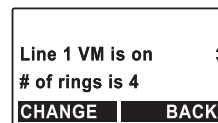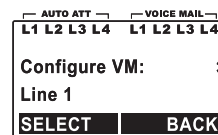

11. Press the **SELECT** soft button.
12. The system will return to the Configure VM option screen.

## Reset Extension Password (Base Unit)

This feature allows the user to reset any extension password to its default "0000" password using the Base Unit. This feature is useful if an extension password has become unknown.

**NOTE:** *The user must know the administrator password to use this feature.*

1. Press the **Voice Mail** button.
2. To reset an extension password to the default "0000" setting, press **▲** or **▼** on the **Navigation** button to scroll through the options until "Reset password" appears on the display.
3. Press the **SELECT** soft button.
4. Enter the four-digit administrator password.

**NOTE:** *The default administrator password is "7221". Use this password when resetting the extension passwords or erasing all voice mail. If the administrator password was changed and the new number is not known, there is no way to recover it without resetting the system. The administrator password will default to "7221" after a reset.*

*See "Settings and Adjustments, Base Unit Setup, Administrator Password" for instructions on changing the administrator password.*

5. Enter two-digit VM box number.
6. Press the **SELECT** soft button. A confirmation tone will sound.
7. The extension password is reset to the default setting and the system will return to the voice mail option screen.

Enter admin password:	
**##	
	BACK

Reset password for VM box #:	
##	
SELECT	CANCEL

## Voice Mail

---

### Clear all VM box messages (Base Unit)

1. Press the **Voice Mail** button.
2. To clear all messages from voice mailbox, press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Clear VM box"* appears on the display.
3. Press the **SELECT** soft button.
4. Enter admin password using keypad.
5. The display will prompt the user to confirm, *"Clear all VM for all extensions?"*
6. To confirm, press the **YES** soft button.
7. To cancel, press the **NO** soft button.
8. The system will return to the voice mail option screen.

Enter admin password:	
***##	
	BACK

Clear all VM for all extensions?	
YES	NO

### Voice Mail Box Management Options (Base Unit)



VM box management allows users to change their extension password and customize their mailbox greeting.

#### Change Extension Password (Base Unit)

1. Press the **Voice Mail** button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Access VM"* appears on the display.
3. Press the **SELECT** soft button.
4. Voice mail can only be accessed by 2 users at a time. If voice mail is not available, the display will show *"System busy"*.
5. Enter the two-digit VM box number followed by your four-digit extension password when prompted. If voice mail is in use, the display will show *"System busy"* and return to the voice mail menu after 5 seconds.

AUTO ATT		VOICE MAIL					
L1	L2	L3	L4	L1	L2	L3	L4
Voice Mail:				↕			
Access VM							
SELECT				BACK			

Enter VM box # and password:	
***####	
	BACK

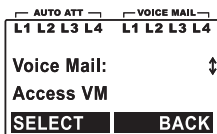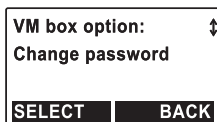

6. If the password is correct, the display shows the voice mailbox number, number of new messages, number of old messages and "Play new".

**NOTE:** If the password is incorrect, the display shows "Invalid password" and will return to the voice mail menu after 5 seconds.

7. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "VM box option" appears on the display.
8. Press the **SELECT** soft button.
9. The display will show "Change password".
10. Press the **SELECT** soft button.
11. Enter new password using keypad (1–9, \*, #).
12. Re-enter password to verify.
13. If the passwords match, a confirmation tone will sound. The password is now changed and the system will return to the VM box option screen.
14. If the passwords do not match, the display will show "Invalid password Please re-enter." Re-enter password or press the **CANCEL** soft button to exit.

### Play Greeting (Base Unit)

1. Press the **Voice Mail** button.
2. "Access VM" appears on the display.
3. Press the **SELECT** soft button.
4. Voice mail can only be accessed by 2 users at a time. Only 1 user can access a mailbox at a time. If voice mail is not available, the display will show "System busy".

## Voice Mail

---

5. Enter the two-digit VM box number followed by your four-digit extension password when prompted. If voice mail is in use, the display will show "System busy" and return to the voice mail menu after 5 seconds.
6. If the password is correct, the display will show the voice mailbox number, number of new messages, and number of old messages and "Play new".

**NOTE:** If the password is incorrect, the display shows "Invalid password" and will return to the voice mail menu after 5 seconds.

7. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "VM box option" appears on the display.
8. Press the **SELECT** soft button.
9. To play recorded mailbox greeting, press **▲** or **▼** on the **Navigation** button to scroll through the options until "Play greeting" appears on the display.
10. Press the **SELECT** soft button.
11. The system will play the greeting. To stop playing the greeting, press the **STOP** soft button.
12. The system will return to the VM box option screen.

### Record Greeting (Base Unit)

1. Press the **Voice Mail** button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Access VM" appears on the display.
3. Press the **SELECT** soft button.
4. Voice mail can only be accessed by 2 users at a time. Only 1 user can access a mailbox at a time. If voice mail is not available, the display will show "System busy".

Enter VM box # and password: **####	
	BACK

VM box option: Change password	
SELECT	BACK

Playing greeting	
STOP	

AUTO ATT				VOICE MAIL			
L1	L2	L3	L4	L1	L2	L3	L4
Voice Mail: Access VM							
SELECT				BACK			

Enter VM box # and password: **####	
	BACK

VM box option: Change password	↕
SELECT	BACK

Recording greeting	
FINISH	

AUTO ATT				VOICE MAIL			
L1	L2	L3	L4	L1	L2	L3	L4
Voice Mail: Access VM							
SELECT				BACK			

- Enter the two-digit VM box number followed by your four-digit extension password when prompted. If voice mail is in use, the display will show *"System busy"* and return to the voice mail menu after 5 seconds.
- If the password is correct, the display will show the voice mailbox number, number of new messages, and number of old messages.  
*NOTE: If the password is incorrect, the display shows "Invalid password" and will return to the voice mail menu after 5 seconds.*
- Press ▲ or ▼ on the **Navigation** button to scroll through the options until *"VM box option"* appears on the display.
- Press the **SELECT** soft button.
- To record mailbox greeting, press ▲ or ▼ on the **Navigation** button to scroll through the options until *"Record greeting"* appears on the display.
- Press the **SELECT** soft button.
- After a long beep, the system will begin recording. Start recording your greeting. When you are finished, press the **FINISH** soft button.
- The system will playback the recorded greeting and then return to the VM box option screen.

### Delete Greeting (Base Unit)

- Press the **Voice Mail** button.
- Press ▲ or ▼ on the **Navigation** button to scroll through the options until *"Access VM"* appears on the display.
- Press the **SELECT** soft button.
- Voice mail can only be accessed by 2 users at a time. Only 1 user can access a mailbox at a time. If voice mail is not available, the display will show *"System busy"*.

## Voice Mail

---

5. Enter the two-digit VM box number followed by your four-digit extension password when prompted. If voice mail is in use, the display will show *"System busy"* and return to the voice mail menu after 5 seconds.
6. If the password is correct, the display will show the voice mailbox number, number of new messages, and number of old messages.

**NOTE:** *If the password is incorrect, the display shows "Invalid password" and will return to the voice mail menu after 5 seconds.*

7. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"VM box option"* appears on the display.
8. Press the **SELECT** soft button.
9. To delete mailbox greeting, press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Delete greeting"* appears on the display.
10. Press the **SELECT** soft button.
11. The display will prompt the user to confirm, *"Delete greeting?"*
12. To confirm, press the **YES** soft button. If the system is using the default greeting, it cannot be deleted. The display will show *"Default greeting can not be deleted."* Only recorded greetings can be deleted.
13. To cancel, press the **NO** soft button.
14. The system will return to the VM box option screen.

**Enter VM box #  
and password:**  
\*\*\*###  
**BACK**

**VM box option:** **Delete greeting** **↕**  
**SELECT** **BACK**

**Delete greeting?**  
**YES** **NO**




## Voice Mail Box Management Options (Cordless Handset)

VM box management allows the user to manage their extension password and customize their mailbox greeting.

### Change Extension Password (Cordless Handset)

1. Press the **Voice Mail** button.
2. Enter your two-digit handset ID followed by your four-digit password when prompted.
3. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "VM box option" appears on the display.
4. Press the **SELECT** soft button.
5. "Change password" appears on the display.
6. Press the **SELECT** soft button.
7. Enter new four-digit password.
8. Re-enter password to verify.
9. If the passwords match, a confirmation tone will sound. The password is now changed and the system will return to the VM box option screen.
10. If the passwords do not match, the display will show "Invalid password Please re-enter." Re-enter password or press the **CANCEL** soft button to exit.

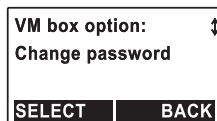


### Play Greeting (Cordless Handset)

1. Press the **Voice Mail** button.
2. Enter your two-digit handset ID and four-digit password when prompted.
3. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "VM box option" appears on the display.

## Voice Mail


---

4. Press the **SELECT** soft button.
5. To play recorded mailbox greeting, press ▲ or ▼ on the **Navigation** button to scroll through the options until *"Play greeting"* appears on the display.
6. Press the **SELECT** soft button.
7. The handset will play the greeting. To stop playing the greeting, press the **STOP** soft button.
8. The handset will return to the VM box option screen.

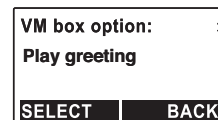

### Record Greeting (Cordless Handset)

1. Press the **Voice Mail** button.
2. Enter your two-digit Cordless Handset ID and four-digit extension password when prompted.
3. Press ▲ or ▼ on the **Navigation** button to scroll through the options until *"VM box option"* appears on the display.
4. Press the **SELECT** soft button.
5. To record mailbox greeting, press ▲ or ▼ on the **Navigation** button to scroll through the options until *"Record greeting"* appears on the display.
6. Press the **SELECT** soft button.
7. After a long beep, the system begins recording. Start recording your greeting. When you are finished, press the **FINISH** soft button.
8. The system plays the message recorded and returns to the VM box option screen.

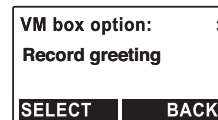

### Delete Greeting (Cordless Handset)

1. Press the **Voice Mail** button.
2. Enter your two-digit Cordless Handset ID followed by your four-digit extension password when prompted.



3. Press ▲ or ▼ on the **Navigation** button to scroll through the options until "VM box option" appears on the display.
4. Press the **SELECT** soft button.
5. To delete mailbox greeting, press ▲ or ▼ on the **Navigation** button to scroll through the options until "Delete greeting" appears on the display.
6. Press the **SELECT** soft button.
7. The display will prompt the user to confirm, "Delete greeting?"
8. To confirm, press the **YES** soft button. If the system is using the default greeting, it cannot be deleted. The display will show "Default greeting cannot be deleted." Only recorded greetings can be deleted.
9. To cancel, press the **NO** soft button.
10. The system will return to the VM box option screen.

## Voice Mail Box Management Options (Offsite)

Your voice mail personal greeting can be changed from an offsite location.

1. When calling from an offsite location, wait until the phone answers then press the "\*" (star) key to access voice mail through the auto attendant.
2. A voice prompt will ask "Please enter the extension followed by the password."
3. Enter the two-digit extension and four-digit extension password.
4. If the extension and password were entered correctly, the voice prompt will instruct, "Press one to listen to new messages, press two to listen to old messages, or press three to change your mailbox options." If the extension and password were entered incorrectly, the voice prompt will say "The password you've entered is invalid," The system will allow 2 more attempts to enter a correct password and will hang up after the third incorrect attempt..

## Voice Mail

- After choosing to change the mailbox options (option three) the voice prompt will say, *"Press two to listen to your personal greeting, press three to record a new personal greeting, press four to delete your personal greeting, or press the pound key to return to the previous menu."*

Press "2" to play the personal greeting. The personal greeting will be played or the default *"Please leave a message after the tone"* will be played.

Press "3" to record a new personal greeting. The voice prompt will say, *"To record new greetings, speak clearly after the tone. When you finish recording, press the pound key."* A long beep will sound. Record the message and press the # key.

Press "4" to delete the personal greeting.


- Press "#" to return to the previous menu.


### Access Voice Mail (Base Unit)

Several options are available when accessing voice mail through the Base Unit including play new, play old, and VM box option.

#### Play New Messages (Base Unit)

- Press the **Voice Mail** button.
- "Access VM" appears on the display.
- Press the **SELECT** soft button.
- Voice mail can only be accessed by 2 users at a time. Only 1 user can access a mailbox at a time. If voice mail is not available, the display shows *"System busy"*.
- Enter the two-digit VM box number followed by the four-digit extension password when prompted.
- If the password is correct, the display will show the voice mailbox number, number of new messages, and number of old messages. If the password is incorrect,

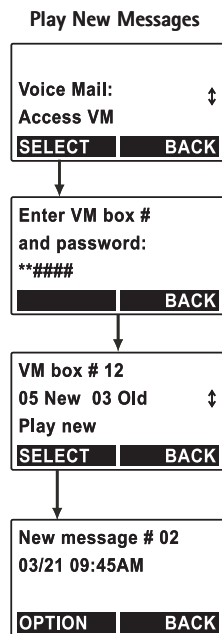

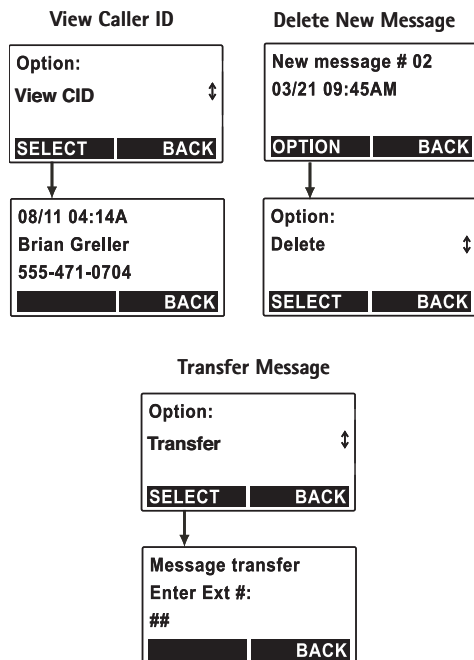

the display will show *"Invalid password"* and return to the voice mail menu after 5 seconds.

7. "Play new" appears near the bottom on the display. If there are new messages, press the **SELECT** soft button.
  8. The first new message will play. To replay the message once from the beginning, press ◀ on the **Navigation** button.
  9. Press ▶ on the **Navigation** button to move to the next new message. If there are no more new messages, the display will stay on the last new message.
  10. To play the previous message, press ◀ ◀ (twice) on the **Navigation** button.
- NOTE:** A confirmation tone should sound each time you press ◀ .
11. At the end of the message, 2 beeps will sound and a voice will say *"This message was recorded on (date and time)"*.
  12. **To delete a new message**, press the **OPTION** soft button.
  13. "Delete" appears on the display.
  14. Press the **SELECT** soft button.
  15. **To view the Caller ID information**, press the **OPTION** soft button.
  16. Press ▲ or ▼ on the **Navigation** button to scroll through the options until "View CID" appears on the display.
  17. Press the **SELECT** soft button.
  18. The display will show the date, time, name, and number of the caller, if available.
  19. Press the **BACK** soft button to return to the new message option screen.
  20. **To transfer the message** to another extension, press the **OPTION** soft button.


## Voice Mail


---

21. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Transfer"* appears on the display.
22. Press the **SELECT** soft button.
23. Enter the two-digit extension at the display prompt or press the **BACK** soft button to return to the new message option screen.
24. If the extension number is valid, the message will be transferred and the display will return to the new message option screen.
25. After moving through all messages, the display will show *"00 new"*. Played, deleted, or transferred messages will not display. Press the **BACK** soft button to return to the new message option screen.

### Play Old Messages (Base Unit)

1. Press the **Voice Mail** button.
2. *"Access VM"* appears on the display.
3. Press the **SELECT** soft button.
4. Voice mail can only be accessed by 2 users at a time. Only 1 user can access a mailbox at a time. If voice mail is not available, the display shows *"System busy"*.
5. Enter the two-digit VM box number followed by the four-digit extension password when prompted. If voice mail is in use, the display will show *"System busy"* and return to the voice mail menu after 5 seconds.
6. If the password is correct, the display will show the voice mailbox number, number of new messages, and number of old messages. If the password is incorrect, the display will show *"Invalid password"* and return to the voice mail menu after 5 seconds.
7. To listen to old messages, press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Play old"* appears on the display.

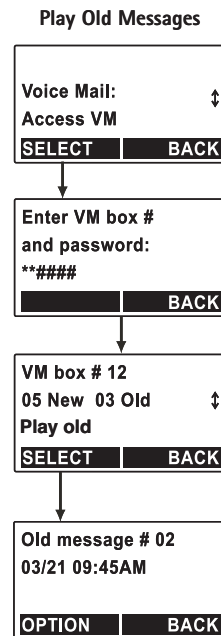

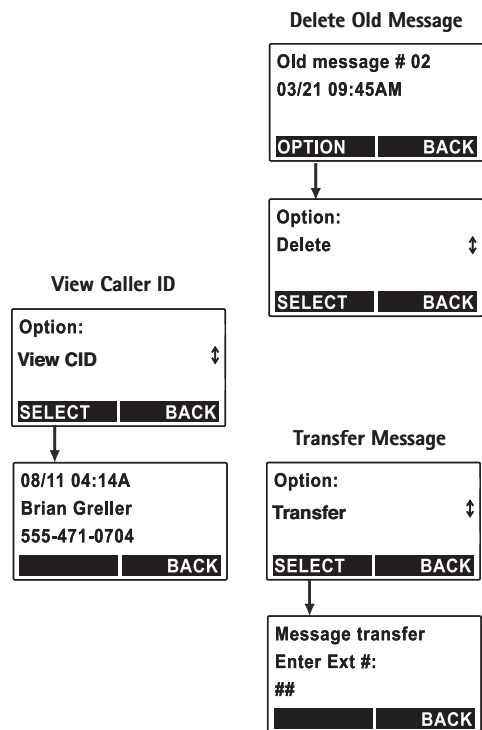

8. Press the **SELECT** soft button.
9. The first old message will play. To replay the message from the beginning, press **◀** on the **Navigation** button.
10. Press **▶** on the **Navigation** button to move to the next old message. If there are no more old messages, the display will stay on the last old message until it times out and returns to Standby Mode.
11. To play the previous message, press **◀ ◀** (twice) on the **Navigation** button.  
NOTE: A confirmation tone should sound each time you press **◀**.
12. To delete an old message, press the **OPTION** soft button. To return to the previous menu, press the **BACK** soft button.
13. "Delete" appears on the display.
14. Press the **SELECT** soft button.
15. To view the Caller ID information, press the **OPTION** soft button.
16. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "View CID" appears on the display.
17. Press the **SELECT** soft button.
18. The display will show the date, time, name, and number of the caller, if available.
19. Press the **BACK** soft button to return to the old message option screen.
20. To transfer the message to another extension, press the **OPTION** soft button.
21. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Transfer" appears on the display.
22. Press the **SELECT** soft button.

## Voice Mail

---


23. Enter the two-digit extension at the display prompt or press the **BACK** soft button to return to the old message option screen.
24. If the extension number is valid, the message will be transferred and the display will return to the old message option screen.
25. After moving through all the messages, the display will stay on the last old message until it times out and returns to Standby Mode. Deleted, or transferred messages will not display. Press the **BACK** soft button to return to the new message option screen.

### Access Voice Mail (Cordless Handset)

Several options are available when accessing voice mail including play new, play old, and VM box option.

#### Play New Messages (Cordless Handset)

1. Press the **Voice Mail** button. The display will show *"Connecting..."* while the Cordless Handset contacts the voice mail system. If the connection fails, the display will show *"No connection"*.
2. Voice mail can only be accessed by 2 users at a time. Only 1 user can access a mailbox at a time. If voice mail is in use, the display will show *"System busy"*.
3. Enter the two-digit VM box number followed by the four-digit extension password when prompted.
4. If the password is incorrect, the display will show *"Invalid password"* and exit the menu.
5. If the password is correct, the display will show the voice mailbox number, number of new messages, and the number of old messages.
6. *"Play new"* appears on the display.
7. Press the **SELECT** soft button.

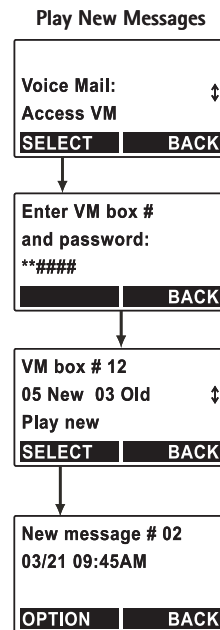



## Delete New Message

New message # 02 03/21 09:45AM	
OPTION	BACK

Option: Delete	
SELECT	BACK

## View Caller ID

Option: View CID	
SELECT	BACK

08/11 04:14A Brian Greller 555-471-0704	
	BACK

## Transfer Message

Option: Transfer	
SELECT	BACK

Message transfer Enter Ext #: ##	
	BACK

8. The first new message will play. Press **▶** on the **Navigation** button to move to the next new message. If there are no more new messages, the display will remain on the last new message until it times out and returns to Standby Mode.
9. To replay the message from the beginning, press **◀** on the **Navigation** button.
10. To play the previous message, press **◀ ◀** (twice) on the **Navigation** button.  
NOTE: A confirmation tone should sound each time you press **◀**.
11. To delete a new message, press the **OPTION** soft button.
12. "Delete" appears on the display.
13. Press the **SELECT** soft button to delete the message.
14. To view the caller ID information, press the **OPTION** soft button.
15. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "View CID" appears on the display.
16. Press the **SELECT** soft button.
17. The display will show the date, time, name, and number of the caller, if available.
18. Press the **BACK** soft button to return to the new message option screen.
20. To transfer the message to another extension, press the **OPTION** soft button.
21. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Transfer" appears on the display.
22. Press the **SELECT** soft button.
23. Enter the two-digit extension at the display prompt or press the **BACK** soft button to return to the new message option screen.
24. If the extension number is valid, the message will be transferred and the display will return to the new message option screen.

## Voice Mail


25. After moving through all messages, the display will show "00 new" (messages). Played, deleted, or transferred messages will not display. Press the **BACK** soft button to return to the "Play new" display.


### Play Old Messages (Cordless Handset)

1. Press the **Voice Mail** button. The display will show "Connecting..." while the Cordless Handset contacts the voice mail system. If the connection fails, the display will show "No connection".
2. Voice mail can only be accessed by 2 users at a time. If voice mail is in use, the display will show "System busy".
3. Enter the two-digit VM box number followed by the four-digit extension password when prompted.
4. If the password is incorrect, the display will show "Invalid password".
5. If the password is correct, the display will show the voice mailbox number, number of new messages, and the number of old messages.
6. To listen to old messages, press **▲** or **▼** on the **Navigation** button to scroll through the options until "Play old" appears on the display.
7. Press the **SELECT** soft button.
8. Press **▶** on the **Navigation** button to move to the next old message. If there are no more old messages, the display will stay on the last old message until it times out and returns to Standby Mode.
9. To play the previous message, press **◀** **◀** (twice) on the **Navigation** button.

**NOTE:** A confirmation tone should sound each time you press **◀**.

10. To delete an old message, press the **OPTION** soft button.
11. "Delete" appears on the display.

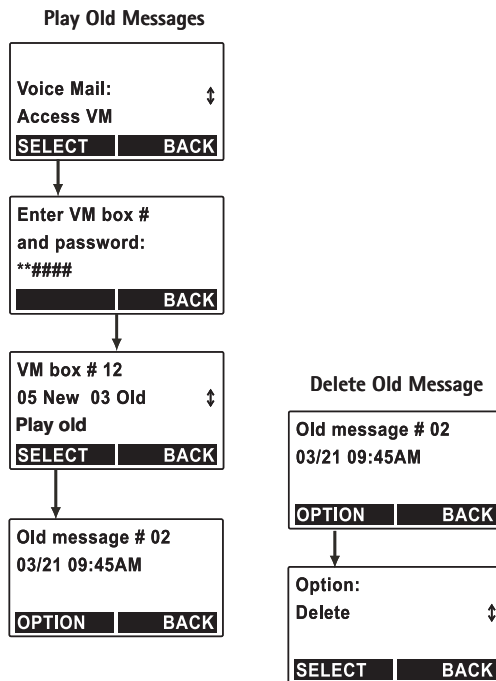

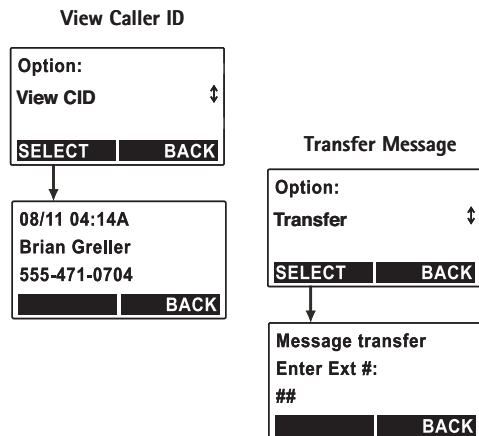

12. Press the **SELECT** soft button to delete the message.

*NOTE: Messages will be stored until deleted.*

13. **To view the caller ID information**, press the **OPTION** soft button

14. Press ▲ or ▼ on the **Navigation** button to scroll through the options until "View CID" appears on the display.

15. Press the **SELECT** soft button.

16. The display will show the date, time, name, and number of the caller, if available.

17. Press the **BACK** soft button to return to the old message option screen.

18. **To transfer the message**, press the **OPTION** soft button.

19. Press ▲ or ▼ on the **Navigation** button to scroll through the options until "Transfer" appears on the display.

20. Press the **SELECT** soft button.

21. Enter the two-digit extension at the display prompt or press the **BACK** soft button to return to the old message option screen.

22. If the extension number is valid, the message will be transferred and the display will return to the old message option screen.

23. After moving through all messages, the display will stay on the last old message until it times out and returns to Standby Mode. Deleted, or transferred messages will not display. Press the **BACK** soft button to return to the "Play old" display.

## Access VM (Offsite Location)

Voice mail can be accessed from an offsite location using a touch tone phone. To access voice mail remotely the auto attendant must be on. The voice prompts may differ if the system is not using the default messages.

## Voice Mail

---

1. The auto attendant will answer the call. The voice prompt will ask *"Please enter extension number or press zero for the operator."* To access voice mail, press the "\*" (star) button.
2. The voice prompt will ask *"Please enter the extension followed by the password."*
3. Enter the two-digit extension followed by the four-digit extension password.
4. If the extension and password were entered correctly, the voice prompt will instruct, *"Press one to listen to new messages, press two to listen to old messages, or press three to change your mailbox options."* If the extension and password were entered incorrectly, the voice prompt will continue to ask for the extension and password.
5. If there are messages stored in voice mail, the first message will play. If there are no messages, the voice prompt will say *"You have no messages."*
6. When the message has finished, the voice prompt will say, *"Press one to replay this message."* Pressing "1" will replay the message and then return to the message menu.
7. If there are additional messages, the voice prompt will say, *"Press two for next message."* Pressing "2" will play the next message and then return to the message menu.
8. If you have not deleted the previous message, the voice prompt will say, *"Press three for previous message."* Pressing "3" will play the previous message and then return to the message menu.
9. After playing a message, the voice prompt will say, *"Press four to delete this message."* Pressing "4" will delete the last played message. The voice prompt will say *"Message deleted"*, and then return to the message menu.  
**NOTE:** *Messages will remain in voice mail until deleted.*
10. Messages can be transferred to another extension. The voice prompt will say, *"Press five to transfer this message."* After pressing "5", the voice prompt will ask *"Please enter the extension number, or press pound to cancel."*

Directory Keypad Character Selection	
Button	Character Order
1	' + , . * ( ) & 1
2	A B C 2
3	D E F 3
4	G H I 4
5	J K L 5
6	M N O 6
7	P Q R S 7
8	T U V 8
9	W X Y Z 9
0	0
*	Toggle case when in character editing
#	Space when in character editing "P" (Pause) when in number editing

If the extension is valid, the voice prompt will say *"Message transferred"* The message will be transferred to the extension and then return to the message menu. If the extension is invalid, the prompt will say *"The extension you've entered is invalid,"* and then will repeat the choices again.

11. After playing a message, the voice prompt will say, *"Or press pound to return to previous menu."* To go back to the previous menu, press the "#" key.

## Directory

The directory stores up to one 100 names and numbers. Names can have up to 16 characters. Phone number entries can have up to 25 digits and spaces.

## Navigate Directory

1. To enter the directory, press ◀ on the **Navigation** button.
2. The directory will display the first entry, or will show *"Directory empty"* if there are no entries. Press ▲ or ▼ on the **Navigation** button to scroll through the directory, or enter a letter from the keypad to jump to the first record in that alphabet group, then Press ▲ or ▼ on the **Navigation** button to reach the exact record.

## Add Entry

1. Press ◀ on the **Navigation** button.
2. The directory will display the first entry, or will show *"Directory empty"* if there are no entries.
3. To add an entry, press the **ADD** soft button.
4. Enter the name when prompted by the display using the keypad.

**NOTE:** To enter a letter or number using the keypad, press the corresponding keypad number one or more times according to the order of the character on the button.

Annie Sullivan  
555-562-9823

ADD
OPTION

Enter Name:  
Annie Sullivan\_

SAVE
DELETE

## Directory

---

**NOTE:** To erase a letter on the display, press ◀ or ▶ on the Navigation button to move the cursor to the immediate right of the letter then press the **DELETE** soft button.

5. To save the name, press the **SAVE** soft button.
6. Enter the number when prompted by the display using the keypad.
7. To save the number, press the **SAVE** soft button.

### Delete Entry

1. To enter the directory, press ◀ on the Navigation button.
2. The directory will display the first entry. Press ▲ or ▼ on the Navigation button to scroll through the directory, or enter a letter from the keypad to jump to the first record in that alphabet group, then press ▲ or ▼ on the Navigation button to reach the exact record.

**NOTE:** To enter a letter using the keypad, press the corresponding keypad number one or more times according to the order of the character on the button.

3. Press the **OPTION** soft button.
4. "Delete" appears on the display. Press the **SELECT** soft button.
5. The display will prompt for confirmation.
6. Press the **YES** soft button to delete entry.
7. Press the **NO** soft button to return to the directory menu.

### Edit Entry

1. Press ◀ on the Navigation button.
2. The directory will display the first entry. Press ▲ or ▼ on the Navigation button to scroll through the directory, or enter a letter from the keypad to jump to the first record in that alphabet group, then press ▲ or ▼ on the Navigation button to reach the exact record.

Enter number:	
555-562-9823_	
SAVE	DELETE

Annie Sullivan	
555-562-9823	
ADD	OPTION

Option:	
Delete	
SELECT	BACK

Annie Sullivan	
555-562-9823	
ADD	OPTION

Enter Name:	
Annie Sullivan_	
SAVE	DELETE

Enter number:	
555-562-9823_	
SAVE	DELETE

Annie Sullivan		↑
555-562-9823		↓
ADD	OPTION	

555-562-9823	
	BACK

**NOTE:** To enter a letter using the keypad, press the corresponding keypad number one or more times according to the order of the character on the button.

- To edit an entry, press the **OPTION** soft button.
- Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Edit" appears on the display.
- Press the **SELECT** soft button.
- Edit the name when prompted by the display using the keypad.

**NOTE:** To enter a letter or number using the keypad, press the corresponding keypad number one or more times according to the order of the character on the button.

**NOTE:** To erase a letter or number on the display, press **◀** or **▶** on the **Navigation** button to move the cursor to the immediate right of the letter then press the **DELETE** soft button.

- Press the **SAVE** soft button.
- Edit the number when prompted by the display.
- Press the **SAVE** soft button.

## View Number

- Press **◀** on the **Navigation** button.
- The directory will display the first entry. Press **▲** or **▼** on the **Navigation** button to scroll through the directory, or enter a letter from the keypad to jump to the first record in that alphabet group, then press **▲** or **▼** on the **Navigation** button to reach the exact record.
- To view the number for an entry, press the **OPTION** soft button.
- Press **▲** or **▼** on the **Navigation** button to scroll through the options until "View number" appears on the display.
- Press the **SELECT** soft button.
- The display will show the phone number.



## Advanced Functions of Your RCA 25450 Phone System

---

7. Press the **BACK** soft button to return to the directory option screen.

### Clear All

1. To enter the directory, press ◀ on the **Navigation** button.
2. To clear the entire directory, press the **OPTION** soft button while viewing the directory.
3. Press ▲ or ▼ on the **Navigation** button to locate the "Clear all" option, and then press **SELECT**.
4. The display will prompt for confirmation.
5. Select the **YES** soft button to clear the entire directory. Select the **NO** soft button to return to the directory menu.

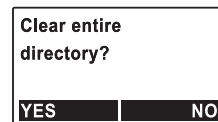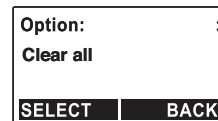

## Advanced Functions of Your RCA 25450 Phone System

The advanced functions are the tools that make the RCA 25450 a complete phone system. These functions include auto attendant, speed dial, conference calls, second incoming call, group setting (Cordless Handset), and call log.

### Auto Attendant (Base Unit)

Auto Attendant is an automated call answering feature that uses default messages or messages you record to direct a call to extensions or their voice mails. Auto Attendant can be turned on or off on each line. You can record a separate message for each line.

1. If the auto attendant function is on, the auto attendant function will greet callers, "Please enter the extension number or press zero for the operator" after the second ring. This function can be turned on for 1 or more phone lines.



## Advanced Functions of Your RCA 25450 Phone System

2. If the caller enters a valid extension, the call will ring the extension. If the call is not answered after 30 seconds, the auto attendant prompts the caller with a custom out-going message, or *"The extension you've entered is busy or not available, please try another extension, or to leave a message, press the pound key."*

The caller can then enter another extension. If, after the third attempt, there is no answer, the caller will be prompted, *"Sorry, nobody can answer your call right now. Please try again later. Goodbye."*

3. If the caller enters an invalid extension, the auto attendant prompts the caller, *"The extension you've entered is invalid, please try another extension."*
4. If the caller chooses to speak with the operator by pressing "0," the phone will prompt the caller, *"Please hold, your call is being transferred to the operator."* The call will then ring the Base Unit.


If the Auto Attendant function is turned off, all extensions will ring and the first one to answer receives the call.

### Configure Auto Attendant (Base Unit)

Auto Attendant can be turned on or off for each line (1-4). A recorded outgoing message (OGM) can be assigned to each line.

#### Turning Auto Attendant On or Off

1. Press the Auto Att button.
2. *"Turn AA on/off"* appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll to the line number *"Line (1-4)"* on the display that you want to turn on or off.
5. Press the **SELECT** soft button.

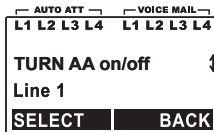

## Advanced Functions of Your RCA 25450 Phone System

- Press the **CHANGE** soft button.
- The display will show "Line (1-4) AA is off" if auto attendant has been turned off on the phone line. If auto attendant is on, the display will show "Line (1-4) AA is on."



### Record Outgoing Message (OGM)

The Record Outgoing Message (OGM) allows you record up to 5 greeting messages up to 60 seconds each from the Base Unit. The default automated outgoing message (OGM) for all lines is "Please enter the extension number or press zero for the operator."

- On the Base Unit, press the **Auto Att** button.
- Press **▲** or **▼** on the **Navigation** button until "Configure AA" appears on the display.
- Press the **SELECT** soft button.
- Press **▲** or **▼** on the **Navigation** button until "Record OGM" appears on the display.
- Press the **SELECT** soft button.
- Up to 5 different greetings can be saved. Select a greeting (1-5) by pressing **▲** or **▼** on the **Navigation** button.

*NOTE: The greeting locations (1-5) are the same as the default greeting until a new OGM is recorded and overwrites them. The "Default" OGM cannot be changed or deleted.*


- Press the **SELECT** soft button.
- A long beep will sound. The user will record their message when the beep ends.
- Press the **FINISH** soft button to stop recording.
- To add or re-record a greeting, repeat the steps for the "Record OGM" function.

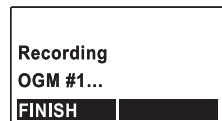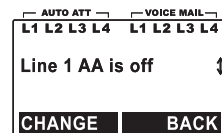

### Play Outgoing Message (OGM)


The saved outgoing messages can be reviewed using the play OGM function.

1. On the Base Unit, press the **Auto Att** button.
2. Press **▲** or **▼** on the **Navigation** button until "Configure AA" appears on the display.
3. Press the **SELECT** soft button.
4. "Play OGM" appears on the display.
5. Press the **SELECT** soft button.
6. The display will show "Play OGM #:" Select a greeting (1–5) by pressing **▲** or **▼** on the **Navigation** button.
7. Press the **SELECT** soft button.
8. The greeting will play.
9. Press the **STOP** soft button when finished listening to the greeting. The display will return to step 6. When the message ends the display will return to "Play OGM #:".
10. To review another greeting, repeat the steps for the "Play OGM" function.

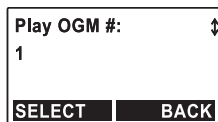

### Select Outgoing Message (OGM)

1. Press the **Auto Att** button.
2. Press **▲** or **▼** on the **Navigation** button until "Configure AA" appears on the display.
3. Press the **SELECT** soft button.
4. The display will show "Configure AA:".
5. Press **▲** or **▼** on the **Navigation** button until "Select OGM" appears on the display.

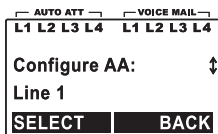

## Advanced Functions of Your RCA 25450 Phone System

---

6. Press the **SELECT** soft button.
7. Select a phone line (1-4) by pressing **▲** or **▼** on the **Navigation** button
8. Press the **SELECT** soft button.
9. Press **▲** or **▼** on the **Navigation** button and select *"OGM 1-5"* or the default OGM.
10. Press the **SELECT** soft button. The selected OGM will play.
11. The display will show *"Save selection?"*.
12. Press **YES** soft button to accept or **NO** soft button to return to Select OGM screen.
13. If the **YES** soft button is selected you will hear a confirmation tone and display returns to *"Configure AA:"* screen.
14. To configure another line, repeat the steps for the "Configure AA" function.

### Hold Message (Base Unit)


The hold message function allows the user to record, play, or delete a message for callers placed on hold to remind them they are on hold. The message can be as long as 30 seconds. The default message is a double beep tone. To record your own hold message, refer to the following steps.

#### Record a Hold Message

Record a Hold message allows the user to create a message from the Base Unit to be played while a caller is on hold.

1. Press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"System setting"* appears on the display.
3. Press the **SELECT** soft button.

## Advanced Functions of Your RCA 25450 Phone System

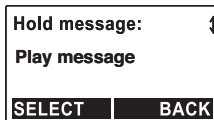

4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Hold message"* appears on the display.
5. Press the **SELECT** soft button.
6. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Record message"* appears on the display.
7. Press the **SELECT** soft button.
8. After a long beep, the display will show *"Recording hold message..."* Record the hold message.
9. Press the **FINISH** soft button to stop recording.
10. The display will show *"Updating hold message..."* and return to the hold message option screen.
11. The message will play. After the message plays, press the **Exit** button or wait for the menu to time out to return to the Standby Mode.

### Play a Hold Message

The hold message can be reviewed using the play message function.

1. On the Base Unit, press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"System setting"* appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Hold message"* appears on the display.
5. Press the **SELECT** soft button.
6. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Play message"* appears on the display.

## Advanced Functions of Your RCA 25450 Phone System


---

7. Press the **SELECT** soft button.
8. While the message is playing, the display will show *"Playing hold message..."*
9. Press the **STOP** soft button when finished listening to the message.

### Delete a Hold Message

The hold message can be deleted using the delete message function.

1. Press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"System setting"* appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Hold message"* appears on the display.
5. Press the **SELECT** soft button.
6. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Delete message"* appears on the display.
7. Press the **SELECT** soft button.
8. The display will prompt *"Delete hold message?"*
9. Press the **YES** soft button to delete the message or **NO** to return to hold message option menu.

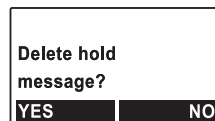

### Speed Dial (Base Unit)

The Base Unit can save displayed telephone numbers as Speed Dial numbers to one of its 16 **Memory** button locations.

### Calling Speed Dial Numbers

1. Lift the Handset or press the **Speaker** button.

## Advanced Functions of Your RCA 25450 Phone System

Select location	
	BACK

Andrew Blair 555-456-9876	
YES	NO

Enter name: Annie Sullivan	
SAVE	DELETE

2. Press a **Speed Dial (Memory)** button.

### Saving Phone Numbers to Speed Dial (Memory) buttons

1. On the **Navigation** button, press ◀ (**DIR**) to access the Directory, or ▶ (**CID**) to access the Caller ID log to locate a displayed telephone phone number to save.
2. Press ▲ or ▼ on the **Navigation** button to scroll to a displayed telephone number.
3. Press the **Store** button.
4. The display will prompt *"Select Location"*.
5. Press the **Memory** button location desired to store the number.
6. If the selected location already has a number stored, the display will show the name and number with *"Overwrite?"* at the top of the screen.
7. Press the **YES** soft button to update the record.
8. Press the **NO** soft button to cancel changes to the current record.

### Three-Way Conference Calls

The conference call function allows a caller from the Base Unit or a Cordless Handset to add a third person to a call. The call must include at least one outside line. Conference calls between three extensions (handsets or Base Unit) are not supported. Three-way conference calls between an extension/Base Unit and two outside phone lines require access to a free second line.

### Add Extension From Base Unit

 
1. Press the **Hold** button to place the outside call on hold.
2. To bring in a Cordless Handset for a three-way conference, press the **Intercom** button.

## Advanced Functions of Your RCA 25450 Phone System

---

3. Enter the two-digit Cordless Handset ID or press one of the 16 one-touch **Memory** buttons to page a Cordless Handset.
4. After the Cordless Handset answers, press the **CONF** soft button.
5. The display will show "Select line to conference" and list all lines on hold. Press ▲ or ▼ on the **Navigation** button to locate the line to add to the conference.
6. Press the **SELECT** soft button to start three-way conference.


*NOTE: Any one of the two non-initiating parties can drop out of the three-way conference, leaving the remaining two parties still in conversation.*



### Add Extension From Cordless Handset

1. Press the **OPTION** soft button.
2. "Hold" appears on the Display.
3. Press the **SELECT** soft button.
4. To add handset or the Base Unit for a three-way conference, press the **Intercom** button.
5. Enter a handset ID or ID = 00 for the Base Unit.
6. After the second handset or the Base Unit answers, press the **CONF** soft button.
7. The display will show "Select line to conference" and list all lines which have been placed on hold.
8. Press ▲ or ▼ on the **Navigation** button to locate the line to join the conference.
9. Press the **SELECT** to start a three-way conference.

*NOTE: Any one of the two non-initiating parties can drop out of the three-way conferencing, leaving the remaining two parties still in conversation.*

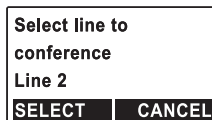



## Advanced Functions of Your RCA 25450 Phone System

 
---

### Add Phone Line From Base Unit

1. Press the **Hold** button to place the current call on hold.
2. To add a phone line, lift the handset, press the **Speaker** button, or select an available **Line (1-4)** button and enter a phone number, or press ◀ or ▶ on the **Navigation** button to dial from Directory or Call Log.
3. After the second phone line answers, press the **CONF** soft button.
4. The display will show *"Select line to conference"* and list all lines which have been placed on hold. Press ▲ or ▼ on the **Navigation** button to locate the line to join the conference.
5. Press the **SELECT** soft button to start three-way conference. Any one of the 2 non-initiating parties can drop out of the three-way conference, leaving the remaining two parties still in conversation.

### Add Phone Line From Cordless Handset

1. Press the **OPTION** soft button.
2. *"Hold"* appears on the Display.
3. Press the **SELECT** soft button.
4. To add a phone line, press the **Talk** or **Speaker** button and enter a phone number; press the **REDIAL** soft button; or press ◀ or ▶ on the **Navigation** button to dial from Directory or Call Log.
5. After the second phone line answers, press the **CONF** soft button.
6. The display will show *"Select line to conference"* and list all lines which have been placed on hold. Press ▲ or ▼ on the **Navigation** button to locate the line to join the conference.



## Advanced Functions of Your RCA 25450 Phone System

---

7. Press the **SELECT** soft button to start three-way conference.

**NOTE:** *Any one of the two non-initiating parties can drop out of the three-way conference, leaving the remaining two parties still in conversation.*

### Second Incoming Call

If a second call is received while a call is in progress, a long beep will sound if the feature is on and the display will show *"Incoming call from Line (1-4)"*. The Caller ID information will display if available.

#### Configure Second Incoming Call (2nd Call Alert)

1. On the Base Unit, press the **MENU** soft button.
2. Press **▲** or **▼** on the Navigation button to locate *"Phone settings"*.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the Navigation button to locate *"2nd call alert"*.
5. Press the **SELECT** soft button.
6. Press **▲** or **▼** on the Navigation button to choose *"on (default)"* or *"off"*.
7. Press the **SELECT** soft button.

#### Using Base Unit for Second Incoming Call

1. To accept the second call, place the first call on hold by pressing the **Hold** button or end the current call.
2. Press the **Speaker** button to use speakerphone, press the **Headset** button to use the headset, or press a **Line (1-4)** button shown on the display.
3. The handset receiver may be lifted and used once one of the options is selected in step 2.


### Using Cordless handset for Second Incoming Call

1. Press the **OPTION** soft button.
2. *"Hold"* appears on the Display.
3. Press the **SELECT** soft button.
4. Or, to end the current call, press the **End** button.
5. To accept the second call, press the **Talk** button.

### Extension Group Setting (Cordless Handset)

The Extension Group Setting feature allows a group of Cordless Handsets to be called at the same time. The first handset to answer receives the call. For the Group setting to function, cordless handsets subscribe to the same Group ID number. There are 4 numbers available (91–94). A Group ID number acts similarly to an individual handset ID number; it can be called, paged, or have calls transferred to it.

A Cordless Handset's group setting(s) is individually selected and is not known to other cordless handsets or the Base Unit. A Cordless Handset can change group settings at any time. The Base Unit is a member of all groups. However, the Base Unit cannot assign groups to the cordless handsets nor can it unsubscribe a Cordless Handset from a group.

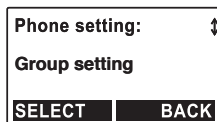

### Selecting and Deleting an Extension Group ID number

1. Press the **MENU** soft button on the Cordless Handset.
2. Press **▲** or **▼** on the **Navigation** button to locate the *"Phone setting"* option.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to locate the *"Group setting"* option.
5. Press the **SELECT** soft button.

## Advanced Functions of Your RCA 25450 Phone System

---

6. The display will show a list of group(s) to which the Cordless Handset subscribes. The default list is empty.
7. Press the **OPTION** soft button to enter the submenu with "Subscribe" and "Unsubscribe" options.
8. To add a group, press **▲** or **▼** on the **Navigation** button and select "Subscribe".
9. Press the **SELECT** soft button.
10. The display will ask for a two-digit Group ID (91–94). Upon entering a valid Group ID, display will show the updated subscription list.
11. To delete a group, press **▲** or **▼** on the **Navigation** button to select "Unsubscribe".
12. Press the **SELECT** soft button.
13. The display will ask for a two-digit Group ID (91–94). Upon entering a valid Group ID, display will show the updated subscription list.
14. Press the **BACK** soft button to return to the "Phone setting" menu, or press the **Exit** button to return to standby, or press the **SELECT** soft button to make more changes.

<b>Groups</b>	
<b>unsubscribed:</b>	
91, 93, 94	
<b>OPTION</b>	<b>BACK</b>

<b>Option:</b>	↕
<b>Subscribe</b>	
<b>SELECT</b>	<b>BACK</b>

<b>Enter group to</b>	
<b>subscribe:</b>	
9#	
	<b>BACK</b>

### Call Log

Call Log is a list of Caller ID (CID) information for the last 50 incoming calls, starting with the most recent. Each record includes the telephone number, name (if available), and time stamp (date and time). To use this feature, you must subscribe to a Caller ID with a Call Waiting Service.

The display will show the date and time of call on the first line, followed by the name on the second line, and the phone number on the third line. An unread record will have a "NEW" at the end of the first line of display.

## Advanced Functions of Your RCA 25450 Phone System

When viewing a call record, the number can be dialed, stored to the directory, added to speed dial (Base Unit), or deleted.

### View Call Log

To view the call log, press **▶** on the **Navigation** button to enter the Call Log. Press **▲** or **▼** on the **Navigation** button to scroll through the numbers and names when available.

### Call a displayed Number

**NOTE:** A number can only be dialed when the phone is in standby or on hold.

1. From a Cordless Handset, press the **Talk** or **Speaker** button.
2. From the Base Unit, press the **Dial**, **Speaker**, **Headset**, an idle **Line** button, or pick up the handset.

### Modify Logged Numbers

The displayed Caller ID telephone number (in most cases) will be a ten-digit number with the three-digit area code followed by the seven-digit telephone number.

Logged numbers can be modified to comply with the local dialing rules.

1. To enter the Call Log, press **▶** on the **Navigation** button.
2. The display will show the date, time, name, and number with area code.
3. To display the telephone number without the "1" or area code, press the **FORMAT** soft button.
4. To return to displaying the telephone number with area code or prefix, press the **FORMAT** soft button once again.

*For example, the number stored in the Call Log is "1-555-471-0704", pressing the **FORMAT** soft button once will change the displayed number to "471-0704". Pressing the **FORMAT** soft button a second time will change the displayed number to "555-471-0704". Pressing the **FORMAT** soft button a third time will display the original number "1-555-471-0704".*

08/11 04:14A NEW	
Brian Greller	
555-471-0704	
FORMAT	OPTION

## Advanced Functions of Your RCA 25450 Phone System

---

### Save displayed Caller ID Information into the Directory

1. To save displayed Caller ID information into the directory, press the **OPTION** soft button.
2. Press **▲** or **▼** on the **Navigation** button to move to the “Save” option.
3. Press the **SELECT** soft button.
4. The display switches to directory editing screen, where the Caller ID name and number can be changed before it is saved.
5. Press the **SAVE** soft button when the name is displayed correctly.
6. Press the **SAVE** soft button when the number is displayed correctly.

Option:	↑
Save	
<b>SELECT</b>	<b>BACK</b>

### Delete displayed Caller ID Information From the Call Log

1. To delete displayed Caller ID information from the Call Log, press the **OPTION** soft button.
2. Press **▲** or **▼** on the **Navigation** button to move to the “Delete” option.
3. Press the **SELECT** soft button.
4. Press the **YES** soft button to erase the displayed CID record. Press the **NO** soft button to return to the Call Log menu.

Delete record?	
Brian Greller	
555-471-0704	
<b>YES</b>	<b>NO</b>

### Clear All Caller ID Information from the Call Log

1. To clear all Caller ID information from the Call Log, press the **OPTION** soft button.
2. Press **▲** or **▼** on the **Navigation** button to move to the “Clear all” option.
3. Press the **SELECT** soft button.
4. Press the **YES** soft button to erase all CID records. Press the **NO** soft button to return to the call log menu.

Option:	↑
Clear all	
<b>SELECT</b>	<b>BACK</b>

Clear all CID records?	
<b>YES</b>	<b>NO</b>

## Settings and Adjustment

### Menu System

**NOTE:** *You must exit the Menu System before you can make a call.*

Many of the RCA 25450 Phone System functions (including sound, phone settings, registration, system settings and line dedicate) can be customized to meet individual user requirements. To allow for a quick startup, these functions may have default settings that are factory set when a Base Unit and Cordless Handset(s) are purchased as a system. Most of these functions are accessed by pressing the **MENU** soft button on the Base Unit or Cordless Handset.

**NOTE:** *Some settings listed below are described in other sections of this User's Guide.*

Base Unit <b>MENU</b> Soft Button:	Cordless Handset <b>MENU</b> Soft Button:
<i>Sound</i>	<i>Sound</i>
<i>Ring volume</i>	<i>Ring volume</i>
<i>Ring tone</i>	<i>Ring tone</i>
<i>Key volume</i>	<i>Key volume</i>
<i>Key tone</i>	<i>Key tone</i>
<i>Phone setting</i>	<i>Phone setting</i>
<i>Dialing prefix</i>	<i>Dialing prefix</i>
<i>Area codes</i>	<i>Area codes</i>
<i>Contrast</i>	<i>Call forward</i>
<i>Set time</i>	<i>Group setting</i>
<i>2nd call alert</i>	<i>Line Selection</i>
<i>Registration</i>	<i>2nd call alert</i>
<i>Register HS</i>	<i>Registration</i>
<i>Deregister HS</i>	<i>Register HS</i>
<i>Clear HS ID</i>	<i>Deregister HS</i>
<i>Next HS ID</i>	
<i>System setting</i>	
<i>Flash time</i>	
<i>Admin password</i>	
<i>Hold message</i>	

System settings and procedures for Do Not Disturb (DND) (Base Unit), Line Selection (Cordless Handset), and System Reset (Base Unit) are at the end of this section.

# Settings and Adjustment



---

## Base Unit Setup

### Flash Time

Flash time is the amount of time the phone needs to switch between lines. The flash time function allows the user to adjust the length of time (100 ms–1000 ms selectable, with 600 ms as the default). The flash time requirements may vary by country and service provider.

1. Press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"System setting"* appears on the display.
3. Press the **SELECT** soft button.
4. *"Flash time"* appears on the display.
5. Press the **SELECT** soft button.
6. The display will show a range of values from 100 to 1000.
7. Press **▲** or **▼** on the **Navigation** button to scroll through the options and choose the desired flash time.
8. Press the **SELECT** soft button.

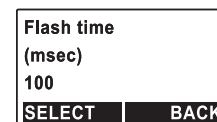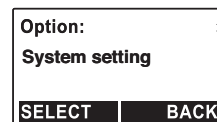

### Administrator Password

The administrator password can be changed using this function.

1. Press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"System setting"* appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Admin password"* appears on the display.



Enter old  
password:  
####  
[ ] CANCEL

Enter new  
password:  
####  
[ ] CANCEL

Verify new  
password:  
####  
[ ] CANCEL

5. Press the **SELECT** soft button.
6. Enter the old four-digit password when prompted. To return to the system setting menu, press the **CANCEL** soft button.

**NOTE:** The default password is "7221". Use this password when resetting the voice mail passwords or erasing all voice mail. If the administrator password has been changed, there is no way to recover it without resetting the system. The administrator password will default to "7221" after a reset.

7. If the password is incorrect, the display will show "Invalid password" and return to the system setting menu.
8. If the password is correct, enter the new four-digit password when prompted. To return to the system setting menu, press the **CANCEL** soft button.
9. Re-enter the new password when prompted.
10. If the new password is retyped incorrectly, the system will return to the "Enter new password" display. Enter the new password and re-enter the password to verify.
11. If both passwords match, the new password will be saved and the system will return to the system setting menu.

### Line Dedicate (Base Unit)

The line dedicate function allows a phone line to be dedicated to a single extension. Auto attendant must be turned off to change line dedication.

**NOTE:** The system will exit the line dedicate function if the Exit button is pressed or a 15 second timeout is exceeded.






1. On the Base Unit, press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Line dedicate" appears on the display.
3. Press the **SELECT** soft button.

## Settings and Adjustment

- Press **▲** or **▼** on the **Navigation** button to scroll through the options "Line (1-4)" to choose a line to dedicate.
- Press the **SELECT** soft button. Press the **BACK** soft button to return to the previous menu. If auto attendant has not been disabled the display will show "Line can only be dedicated to an extension when AA is off".
- The display will show the status of the selected phone line. If the line has not been previously dedicated, the display will show "Line (1-4) dedication is disabled".
- If the phone line is already dedicated, the display will show "Line (1-4) dedicated to Ext # (1-16)". To dedicate the phone line or to dedicate the line to a different extension, press the **CHANGE** soft button. Press the **BACK** soft button to return to the previous menu.
- The display will ask whether to dedicate the line. Press the **YES** soft button to dedicate line. Press the **NO** soft button to return to the line dedicate menu.
- The display will ask for the two-digit extension number to where you will dedicate the line. Enter that extension number.
- Press the **SAVE** soft button. Press the **BACK** soft button to return to the previous menu.

## Sound (Base Unit)

The phone's volumes and tones can be adjusted to the user's preferences including: Speakerphone, Corded Handset, and Headset volumes.

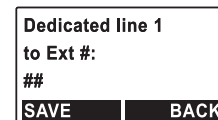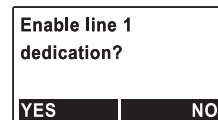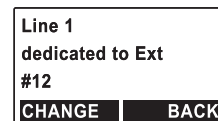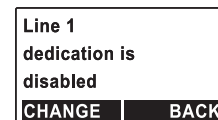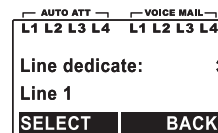

### Receiver, Speakerphone, or Headset Voice Volume (Base Unit)

Adjust the voice volume of the person you are listening to on the line by pressing ▲ or ▼ on the **Navigation** button. There are 6 levels of volume. The selected volume will remain in effect for future phone calls until changed.

1. To increase voice volume, press ▲ on the **Navigation** button.
2. To decrease voice volume, press ▼ on the **Navigation** button.

### Ring Volume (Base Unit)


Ring volume controls the ringer volume for incoming calls and pages. Adjust the volume by pressing ▲ or ▼ on the **Navigation** button, or using the menu system.

#### Adjust by pressing ▲ or ▼ on the **Navigation** button

1. The Base Unit should be on hook (not in use)
2. To increase ring volume, press ▲ on the **Navigation** button.
3. To decrease ring volume, press ▼ on the **Navigation** button.
4. The display will show the volume level (*High, Medium (Default), Low, Off*) and the phone will play the ring volume at each volume level as you scroll through the options. The displayed volume level will be selected if no action is taken in 5 seconds.

#### Using the Menu System


1. Press the **MENU** soft button.
2. *"Sound"* appears on the display.
3. Press the **SELECT** soft button.
4. *"Ring volume"* appears on the display.
5. Press the **SELECT** soft button.

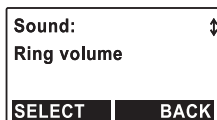

## Settings and Adjustment

---



6. To increase the ring volume, press ▲ on the **Navigation** button.
7. To decrease the ring volume, press ▼ on the **Navigation** button.
8. The display will show the volume level (*High, Medium (Default), Low, Off*) and the phone will play the ring tone at each volume level as the options are scrolled through.
9. To accept the volume setting, press the **SELECT** soft button.

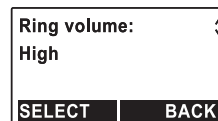

### Ring Tone (Base Unit)




The ring tone can be changed using the menu system. There are four different ring tones. The selected ring tone will remain in effect for future phone calls until changed.

1. Press the **MENU** soft button.
2. "Sound" appears on the display.
3. Press the **SELECT** soft button.
4. Press ▲ or ▼ on the **Navigation** button to scroll through the options until "Ring tone" appears on the display.
5. Press the **SELECT** soft button.
6. To change the ring tone, press ▲ or ▼ on the **Navigation** button.
7. The display will show the ring tone (1–4) and the phone will play the ring tone as the options are scrolled through.
8. To accept the ring tone setting shown on the display, press the **SELECT** soft button.

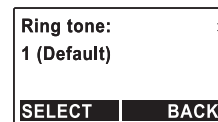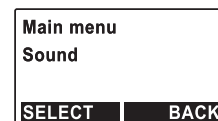

### Key Volume (Base Unit)

The key volume controls the volume of the keypad, and can be adjusted through the menu system.

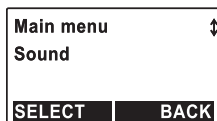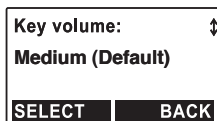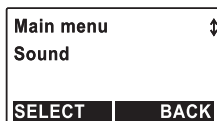

1. Press the **MENU** soft button.
2. "Sound" appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Key volume" appears on the display.
5. Press the **SELECT** soft button.
6. To increase the button volume, press **▲** on the **Navigation** button.
7. To decrease the button volume, press the **▼** on the **Navigation** button.
8. The display will show the volume level ("High, Medium (Default), Low, Off").
9. To accept the volume setting shown on the display, press the **SELECT** soft button.

### Key Tone (Base Unit)


The key tone can be changed using the menu system. There are four different key tones with key tone 1 the default. The selected key tone will remain in effect for future phone calls until changed.

1. Press the **MENU** soft button.
2. "Sound" appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Key tone" appears on the display.
5. Press the **SELECT** soft button.
6. Press **▲** or **▼** on the **Navigation** button to change the key tone.

## Settings and Adjustment

---

- The display will show the key tone (1–4) and the phone will play the key tone as the options are scrolled through.
- To accept the key tone setting shown on the display, press the **SELECT** soft button.

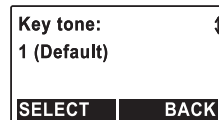


## Cordless Handset Setup


### Register Cordless Handset (Base Unit and Cordless Handset)

Cordless handsets must be registered with the Base Unit before use. If the Cordless Handset was purchased with the Base Unit as a system, the Cordless Handset has already been registered. The ID will be displayed when the Cordless Handset is powered on. If the Cordless Handset has not been registered or the registration has been deleted, the display shows "Please register".

**NOTE:** You must program both the Base Unit and the Cordless Handset to register the handset. Have both units ready to program as you must complete registration of the handset within 30 seconds after programming the Base Unit.

- On the **Base Unit**, press the **MENU** soft button.
- Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Registration" appears on the display.
- Press the **SELECT** soft button.
- "Register HS" appears on the display. Have the **Cordless Handset** ready to program.
- Press the **SELECT** soft button.
- The display will show "Press REGISTER in HS menu options." A 30 second timer will begin at this point. If the registration process is not completed in this time, the process will be canceled.

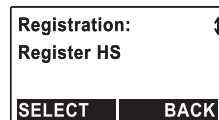

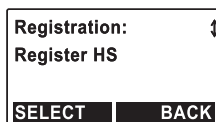


- On the **Cordless Handset**, press the **MENU** soft button.
- Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Registration" appears on the display.
- Press the **SELECT** soft button.
- "Register HS" appears on the display.
- Press the **SELECT** soft button.
- The Cordless Handset will link to the Base Unit at this time.
- When finished, the Cordless Handset display will show "Registration completed". The new ID number is shown on the first line of the Cordless Handset display.
- Repeat the steps for each Cordless Handset to be registered.

### Deregister Cordless Handset (Base Unit and Cordless Handset)

You will program the Base Unit and the Cordless Handset to complete the procedure.

**NOTE:** Cordless Handsets must be deregistered from the Base Unit before the assigned ID can be reused.

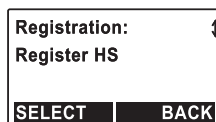


- On the **Base Unit**, press the **MENU** soft button.
- Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Registration" appears on the display.
- Press the **SELECT** soft button.
- Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Deregister HS" appears on the display.
- Press the **SELECT** soft button. Have the **Cordless Handset** ready to program.
- The display on the **Base Unit** will show "Press DEREGISTER in HS menu options." A 30 second timer will begin at this point. If the deregistration process is not completed in this time, the process will be canceled.

## Settings and Adjustment

---



7. On the **Cordless Handset**, press the **MENU** soft button.
8. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Registration"* appears on the display.
9. Press the **SELECT** soft button.
10. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Deregister HS"* appears on the display.
11. Press the **SELECT** soft button.
12. The Cordless Handset will link to the Base Unit at this time. The Cordless Handset display will show *"Deregistration completed,"* and return to standby.
13. Repeat the steps for each Cordless Handset to be deregistered.

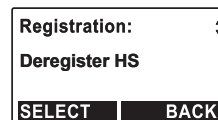

### Clear Cordless Handset ID (Base Unit)

The Clear HS ID function clears an assigned Cordless Handset ID from the Base Unit. This is useful if a Cordless Handset has been lost or replaced. Even if an ID is deregistered by the Cordless Handset, the ID will still be assigned on the Base Unit. The Clear HS ID allows the ID to be reused.

1. On the Base Unit, press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Registration"* appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Clear HS ID"* appears on the display.
5. Press the **SELECT** soft button.
6. The display will ask for the cordless Handset ID.
7. Enter the two-digit cordless Handset ID.

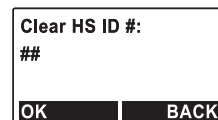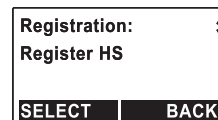




8. Press the **OK** soft button.
9. If a valid ID was entered, a confirmation tone will sound and the ID will be available for reuse.
10. If an invalid ID was entered, the display will show "Invalid ID" and return to the "Registration" submenu.

### Next Cordless Handset ID (Base Unit)

The Next HS ID function allows you to use the Base Unit to assign a specific ID to the next Cordless Handset requesting registration.

**NOTE:** *If the Next Cordless Handset ID function is not used, then the system automatically assigns the lowest available ID number to the next Cordless Handset requesting registration.*

1. On the **Base Unit**, press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Registration" appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Next HS ID" appears on the display.
5. Press the **SELECT** soft button.
6. The display will ask for a two-digit Cordless Handset ID. Enter a valid two-digit Handset ID (01–16) that has not been already assigned.
7. Press the **OK** soft button.
8. If a valid ID was entered, a confirmation tone will sound and the ID will be available for the Cordless Handset requesting registration.
9. If an invalid ID was entered, the display will show "Invalid ID" and return to the "Registration" submenu.

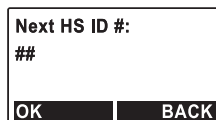

## Settings and Adjustment

---

10. The ID entered in step 6 will be assigned to the next Cordless Handset requesting registration.

### Sound (Cordless Handset)

The phone's volumes and tones can be adjusted to the user's preferences including: Cordless Handset Receiver, Speakerphone, and Headset volumes.

#### Receiver, Speakerphone, or Headset Voice Volume (Cordless Handset)

Adjust the voice volume of the person you are listening to on the line by pressing ▲ or ▼ on the **Navigation** button. There are 6 levels of volume. The selected volume will remain in effect for future phone calls until changed.

1. To increase voice volume, press the ▲ on the **Navigation** button.
2. To decrease voice volume, press the ▼ on the **Navigation** button.

#### Ring Volume and Vibrate Settings (Cordless Handset)

Ring volume controls the ringer volume for incoming calls and pages. The volume can be adjusted by pressing ▲ or ▼ on the **Navigation** button.





1. Press ▲ or ▼ on the **Navigation** button to increase/decrease ringer volume.
2. The display will show the ring volume level and vibrate settings ("Vibrate & High, Vibrate, High, Medium (Default), Low and Off") and the phone will play the ring volume and/or vibrate at each volume level as the options are scrolled through. The displayed volume level will be selected if no action is taken in 5 seconds.

**NOTE:** If you select a Vibrate setting, the Cordless Handset will ring instead of vibrating when it's in the Charging Cradle, and will vibrate when removed from the cradle.

3. To accept the volume setting, press the **Exit** button.

#### Using the Menu System

1. Press the **MENU** soft button.

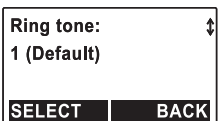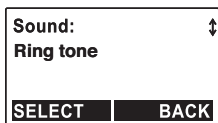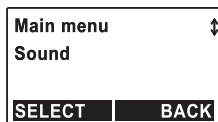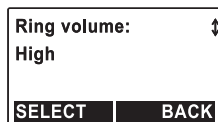

2. "Sound" appears on the display.
3. Press the **SELECT** soft button.
4. "Ring volume" appears on the display.
5. Press the **SELECT** soft button.
6. Press **▲** or **▼** on the **Navigation** button to increase/decrease ringer volume and vibration settings..
7. The display will show the volume level ("Vibrate & High, Vibrate, High, Medium (Default), Low and Off") and the phone will play the ring volume and/or vibrate at each volume level as the options are scrolled through.
8. To accept the volume setting, press the **SELECT** soft button.

### Ring Tone (Cordless Handset)

The ring tone can be changed using the menu system. There are 4 different ring tones. The selected ring tone will remain in effect for future phone calls until changed.

1. Press the **MENU** soft button.
2. "Sound" appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Ring tone" appears on the display.
5. Press the **SELECT** soft button.
6. To change the ring tone, press **▲** or **▼** on the **Navigation** button.
7. The display will show the ring tone (1-4) and the phone will play the ring tone as the options are scrolled through.

## Settings and Adjustment


---

8. To accept the ring tone setting, press the **SELECT** soft button.

### Key Volume (Cordless Handset)

The key volume controls the volume of the keypad, and can be adjusted through the menu system.


1. Press the **MENU** soft button.
2. "Sound" appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the Navigation button to scroll through the options until "Key volume" appears on the display.
5. Press the **SELECT** soft button.
6. To change the key volume, press **▲** or **▼** on the Navigation button.
7. The display will show the volume level (*"Off, Low, Medium (Default), High"*).
8. To accept the volume setting, press the **SELECT** soft button.



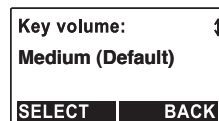


### Key Tone (Cordless Handset)

The key tone can be changed using the menu system. There are four different key tones with key tone 1 the default. The selected key tone will remain in effect for future phone calls until changed.

1. Press the **MENU** soft button.
2. "Sound" appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the Navigation button to scroll through the options until "Key tone" appears on the display.

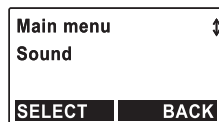

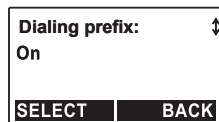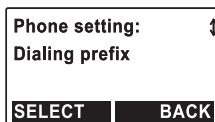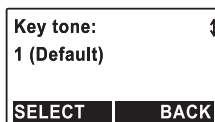

5. Press the **SELECT** soft button.
6. To change the key tone, press **▲** or **▼** on the **Navigation** button.
7. The display will show the key tone (1–4) and the phone will play the key tone as the options are scrolled through.
8. To accept the key tone setting, press the **SELECT** soft button.

## Phone Settings

### Dialing Prefix

When turned on, the dialing prefix allows the user to enter or store up to 14 digits before calling a phone number. This function is useful when using credit and calling cards or phone services requiring access numbers.

#### Turn On Dialing Prefix

1. Press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Phone setting" appears on the display.
3. Press the **SELECT** soft button.
4. "Dialing prefix" appears on the display.
5. Press the **SELECT** soft button.
6. To turn on the dialing prefix function scroll through the options until "On" appears on the display by pressing **▲** or **▼** on the **Navigation** button. The default value for the dialing prefix function is "Off".
7. Press the **SELECT** soft button.
8. Enter the dialing prefix using the keypad.


## Settings and Adjustment

---

9. Press the **SAVE** soft button.

### Turn Off Dialing Prefix

1. Press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Phone setting"* appears on the display.
3. Press the **SELECT** soft button.
4. *"Dialing prefix"* appears on **Navigation** display.
5. Press the **SELECT** soft button.
6. To turn off the dialing prefix function, press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Off"* appears on the display.
7. Press the **SELECT** soft button.

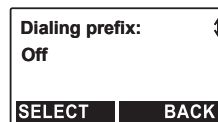


### Area Codes


The area code functions allow calls within local and regional area codes to be dialed without the prefix.

### Edit Local Area Code (LAC)


1. Press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Phone setting"* appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Area codes"* appears on the display.
5. Press the **SELECT** soft button.

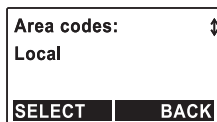

Area codes: ↑↓  
Local  
SELECT BACK

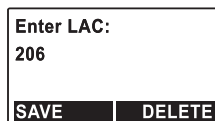

Enter LAC:  
206  
SAVE DELETE

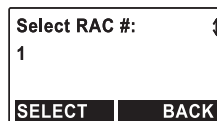

Select RAC #: ↑↓  
1  
SELECT BACK

6. "Local" appears on the display.
7. Press the **SELECT** soft button.
8. Enter the local area code using the keypad.
9. Press the **SAVE** soft button.

### Edit Regional Area Code (RAC)

Setting Regional Area Codes helps the system determine the number format to display when a Caller ID record is received. Caller ID records matching any of the set regional area codes are displayed as 10 digits.

1. Press the **MENU** soft button.
2. Press ▲ or ▼ on the **Navigation** button to scroll through the options until "Phone setting" appears on the display.
3. Press the **SELECT** soft button.
4. Press ▲ or ▼ on the **Navigation** button to scroll through the options until "Area codes" appears on the display.
5. Press the **SELECT** soft button.
6. Press ▲ or ▼ on the **Navigation** button to scroll through the options until "Regional" appears on the display.
7. Press the **SELECT** soft button.
8. Up to 5 different RACs can be entered (1–5). Scroll through the options to the desired RAC.
9. Press the **SELECT** soft button.

## Settings and Adjustment

---




10. The regional area code can be entered or edited using the keypad. Press the **SAVE** soft button to save the regional area codes.

11. To delete, press the **DELETE** soft button.

### Contrast (Base Unit)

The contrast of the display can be modified using the Contrast function. There are 5 contrast levels available.


1. Press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Phone setting" appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Contrast" appears on the display.
5. Press the **SELECT** soft button.
6. Scroll through the options to the desired contrast.
7. Press the **SELECT** soft button.

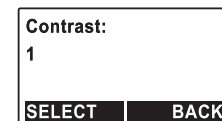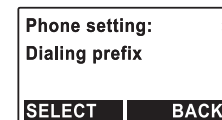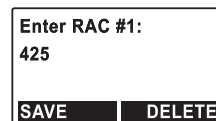

### Set Time (Base Unit)

After the initial setting, the time and date are automatically updated through Caller ID information received from the local phone service provider.

 1. Press the **MENU** soft button.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Phone setting" appears on the display.





Set time:	
MM/DD hr:mm	
03/19 12:08	
SAVE	BACK

Set time:	↕
AM	
SAVE	BACK

Main menu	↕
Sound	
SELECT	BACK

Sound:	↕
Ring volume	
SELECT	BACK

3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until "Set time" appears on the display.
5. Press the **SELECT** soft button.
6. Using the keypad, enter a two-digit month, date, hour, and minute. Press **◀** and **▶** on the **Navigation** button to move the cursor under the digit or letter to be changed. Press the **BACK** soft button to start over.
7. To accept the time and date setting, press the **SAVE** soft button.
8. Press **▲** or **▼** on the **Navigation** button to select "AM" or "PM".
9. Press the **SAVE** soft button.

### Do Not Disturb (DND) (Base Unit)

The ringer and intercom can be turned off using the Do Not Disturb function.


#### Base Unit

1. Press the **DND** button to turn off the ringer. Press the **DND** button again to turn on the ringer. The **DND** button flashes when **DND** is on. "DND enabled" also flashes on the display.
2. To turn off the ringer from the menu system, press the **MENU** soft button.
3. "Sound" appears on the display.
4. Press the **SELECT** soft button.
5. "Ring volume" appears on the display.
6. Press the **SELECT** soft button.

## Settings and Adjustment

---

7. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Off"* appears on the display.
8. Press the **SELECT** soft button to turn off the ringer. The ringer will remain off until it is turned on again from the menu.
9. For temporary silencing the ringer when an incoming call arrives, press the **SILENT** soft button.

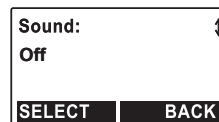

### Auto or Manual Line Selection Settings (Cordless Handset)

The Cordless Handset can be set to Auto Line Selection or Manual Line Selection.

Auto Line Selection mode allows the user to dial a phone number without first choosing a line. An available line is automatically selected.

Manual Line Selection mode allows the user to choose a phone line to make a call.

#### Auto Line Selection Setting

1. Press the **MENU** soft button on the Cordless Handset.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Phone setting"* appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Line selection"* appears on the display.
5. Press the **SELECT** soft button.
6. *"Auto (default)"* appears on the display.
7. Press the **SELECT** soft button. A confirmation tone will sound. The Cordless Handset is now set to the Auto Line Selection mode.

### Manual Line Selection Setting

1. Press the **MENU** soft button on the Cordless Handset.
2. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Phone setting"* appears on the display.
3. Press the **SELECT** soft button.
4. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Line selection"* appears on the display.
5. Press the **SELECT** soft button.
6. Press **▲** or **▼** on the **Navigation** button to scroll through the options until *"Manual"* appears on the display.
7. Press the **SELECT** soft button. A confirmation tone will sound. The Cordless Handset is now set to the Manual Line Selection mode.

## Settings and Adjustment

---

### Reset System (Base Unit)

The system can be reset to factory defaults using a pointed object to press the reset button inside the **Reset** hole on the back of the Base Unit.

The following settings/parameters will be changed after a reset:

- System Security ID—a new one will be randomly selected.
- Cordless Handset registration table—no Cordless Handset is registered
- Base unit Call Log
- Base unit CID records
- Base unit Directory
- Call forwarding numbers for all extensions
- All mailbox contents
- All extension mailbox passwords—reset to 0000.
- Admin password—reset back to 7221 (RCA1).
- All custom outgoing messages will be reset to default
- Main OGM AA and VM—turned on for all lines
- Custom recorded hold message reset to default
- Time and date will be reset to 01/01 12:00 AM
- Mailbox greeting messages, voice volume, ring tone, ring volume, button tone, button volume, dialing prefix, area codes, display contrast, dial mode, and flash time will all be reset to default.

After a reset, all Cordless Handsets must be re-registered to obtain a new system security code.

### Headset and Belt Clip Operation


#### Connecting an Optional Headset to the Cordless Handset

1. Connect the headset (optional) to the HEADSET jack as shown. The handset receiver and microphone are disabled when the headset is connected.
2. Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to approximately 2 to 3 inches from your mouth.
3. Press the **Talk** button to answer or place a call.
4. To return to normal operation, unplug the headset from the jack.

**NOTE:** *If the headset is disconnected during use, the call will remain active until the caller hangs up, or you end the call.*

#### Attaching the Belt Clip

1. Insert the sides of the belt clip into the slots on each side of the handset.
2. Snap the ends of the belt clip into place.

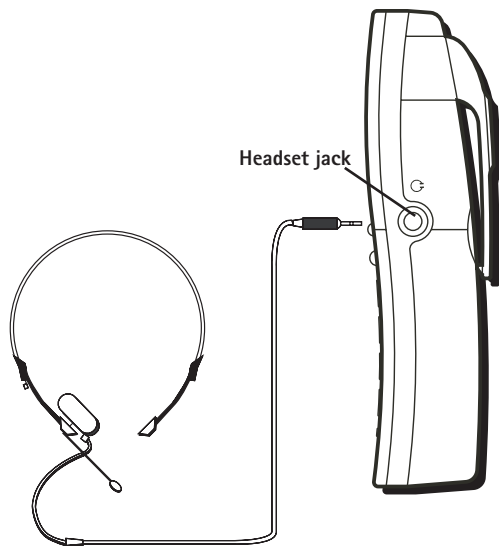

## Settings and Adjustment

---

### Replacing the Batteries

#### Cordless Handset Battery

1. Make sure the telephone is **OFF** (not in Talk mode) before you replace the battery.
2. Remove the back cover.
3. Disconnect the cord attached to the battery pack from the jack inside the battery compartment and remove the battery pack.
4. Insert the new battery pack and connect the plug on the battery pack to the jack inside the compartment.


**NOTE:** It is important to maintain the polarity (black and red wires) to the jack inside the compartment. To ensure proper battery installation, the connector is keyed and can be inserted only one way.

5. Close the battery compartment by pushing the back cover up until it snaps into place.
6. Place the handset in the charging cradle.

**NOTE:** Allow the handset battery to properly charge (for 12 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised.

**NOTE:** Only use the same type of Nickel Metal Hydride (Ni-MH) battery that was originally supplied.

**NOTE:** The Cordless Handset may feel warm to the touch after charging.

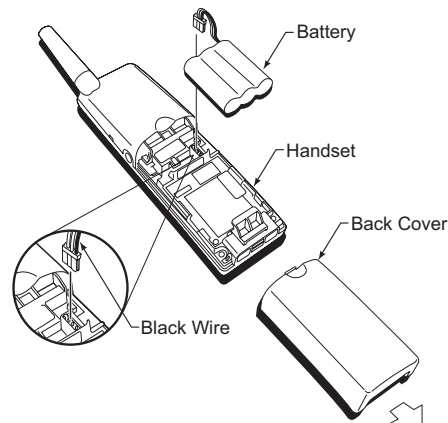

#### Handset Memory Retention

When the battery is disconnected, the handset has the capability to hold the user memory and Caller ID memory for up to 5 minutes.

### Base Unit Battery

**NOTE:** Only use the same type of Nickel Metal Hydride (Ni-MH) battery that was originally supplied.

1. Make sure the telephone is **OFF** before you replace battery.
2. Remove the battery compartment cover.
3. Disconnect the cord attached to the battery pack from the jack inside the battery compartment and remove the battery pack.
4. Insert the new battery pack and connect the plug on the battery pack to the jack inside the compartment.


**NOTE:** It is important to maintain the polarity (black and red wires) to the jack inside the compartment. To ensure proper battery installation, the connector is keyed and can be inserted only one way.

5. Close the battery compartment cover.

**NOTE:** Allow the Base Unit battery to properly charge (for 12 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised.

### Battery Safety Precautions

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the battery listed in the User's Guide.
- Keep batteries out of the reach of children.
- Remove batteries if storing the Base Unit or Cordless Handset over 30 days.

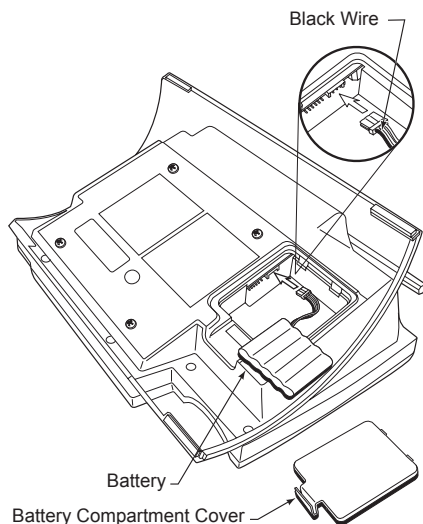

## Other Information

---

### Other Information

#### Display Messages

The following indicators show the status of a message or of the unit.

<b>BLOCKED CALL</b>	The person is calling from a number that has been blocked from transmission.
<b>BLOCKED NAME</b>	The person's name is blocked from transmission.
<b>Delete Record?</b>	Prompt asking if you want to erase Caller ID records or one of the 10 numbers stored in the phone's outgoing memory.
<b>DELETE ENTRY?</b>	Prompt to delete one Directory entry.
<b>CLEAR ALL CID</b>	
<b>RECORDS?</b>	Prompt asking if you want to erase all Caller ID records.
<b>EMPTY</b>	Indicates a memory location is vacant.
<b>ENTER NAME</b>	Prompt telling you to enter the name and number for one of the 16 memory locations.
<b>ENTER TEL NUMBER</b>	Prompt telling you to enter the telephone number for one of the 16 memory locations.
<b>INCOMPLETE DATA</b>	Caller information has been interrupted during transmission or the phone line is excessively noisy.
<b>NEW</b>	Indicates call or calls have not been reviewed.
<b>NO CALLS</b>	Indicates no CID records have been stored.
<b>NO DATA</b>	No Caller ID information was received.



PAGING	Someone has pressed the page button on the base.
TALK 00:00 VOL1	Indicates the handset earpiece is active.
UNKNOWN NAME/ CALLER/NUMBER	The incoming call is from an area not serviced by Caller ID or the information was not sent.

Sound Signals

<i>Signal</i>	<i>Meaning</i>
Single short beep	Successful key entry
Single long beep	Successful operation
Triple short beep	Power ON (Cordless Handset) Unsucessful key entry
A long warbling tone (cordless handset)	Signals an incoming call
One long beep	Confirmation Tone
One long beep and two short beeps every minute	Low battery warning

## Troubleshooting Tips

---

### Troubleshooting Tips

#### Caller ID

##### No display

- Make sure the battery is properly charged for 12 hours.
- Make sure the battery is properly installed and connected.
- Replace the battery. Make sure the unit is connected to a non-switched electrical outlet.
- Disconnect the unit from the electrical outlet and plug it back in.
- Make sure you are subscribed to Caller ID service from your local telephone company.

---

##### Caller ID error message

- The unit displays this message if it detects anything other than valid Caller ID information during the silent period after the first ring. This message indicates the presence of noise on the line.

---

#### Telephone

##### No dial tone

- Check or repeat installation steps.
- Make sure the base power converter is connected to a working electrical outlet.
- Make sure the telephone line cord is connected to the base and the wall jack.
- Disconnect the base from the wall jack and connect another phone to the same jack. If there is no dial tone in the second phone, the problem might be your wiring or local service.
- The handset or headset may be out of range. Move closer to the base.

- Make sure the battery is properly charged for 12 hours.
- Make sure the battery pack is installed correctly.
- Did the handset beep when you pressed the Talk button? Did the display indicator turn on? The battery may need to be charged.

---

### Handset does not ring

- Make sure the ringer volume setting is ON in the MENU system.
- You may have too many extension phones on your line. Try unplugging some phones.
- See solutions for "No dial tone."

---

### You experience static, noise, or fading in and out

- Handset or headset may be out of range. Move closer to the base.
- Relocate the base.
- Charge the battery.
- Make sure the base is not plugged into an outlet with another household appliance.

---

### Unit beeps

- See solutions for "No dial tone."
- Replace the battery.

### Memory dialing

- Make sure you have correctly programmed the memory keys.
- Make sure to follow proper dialing sequence.
- If you had a power outage or replaced the battery, reprogram the numbers into memory.

## Troubleshooting Tips

---

### General Product Care

To keep your telephone in good working order, follow these guidelines:

- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lighting).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping and other rough treatment.
- Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.

### Causes of Poor Reception

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction that shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into an AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset or headset battery is low.
- You're out of range of the base.

### Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

## Service Information

---

### Service Information

If trouble is experienced with this equipment, for repair or warranty information, please contact customer service at **1-800-511-3180**. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

This product may be serviced only by the manufacturer or its authorized service agents. Changes or modifications not expressly approved by ATLINKS USA, Inc. could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this guide or call customer service at **1-800-511-3180**.

Or refer inquiries to:

Thomson Inc.

Manager, Consumer Relations

P O Box 1976

Indianapolis, IN 46206

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date \_\_\_\_\_

Name of store \_\_\_\_\_

### Limited Warranty

**What your warranty covers:**

- Defects in materials or workmanship.

**For how long after your purchase:**

- Two years from date of purchase. (The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

**What we will do:**

- Provide you with a new or, at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

**How you get service:**

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- "Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period, must be presented to obtain warranty service." For rental firms, proof of first rental is also required. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

**ATLINKS USA, Inc.  
c/o Thomson Inc.  
11721 B Alameda Ave.  
Socorro, Texas 79927**

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment for loss or damage. ATLINKS accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you freight prepaid.

**What your warranty does not cover:**

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. Any additional information, should be obtained from your dealer.)
- Installation and setup service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.

## Warranty Information

---

- Acts of nature, such as but not limited to lightning damage.

### **Product Registration:**

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

### **Limitation of Warranty:**

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY ATLINKS USA, INC., ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ATLINKS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

### **How state law relates to this warranty:**


- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

### **If you purchased your product outside the USA:**

- This warranty does not apply. Contact your dealer for warranty information.



## Wall Mounting Bracket Template for Cordless Handset

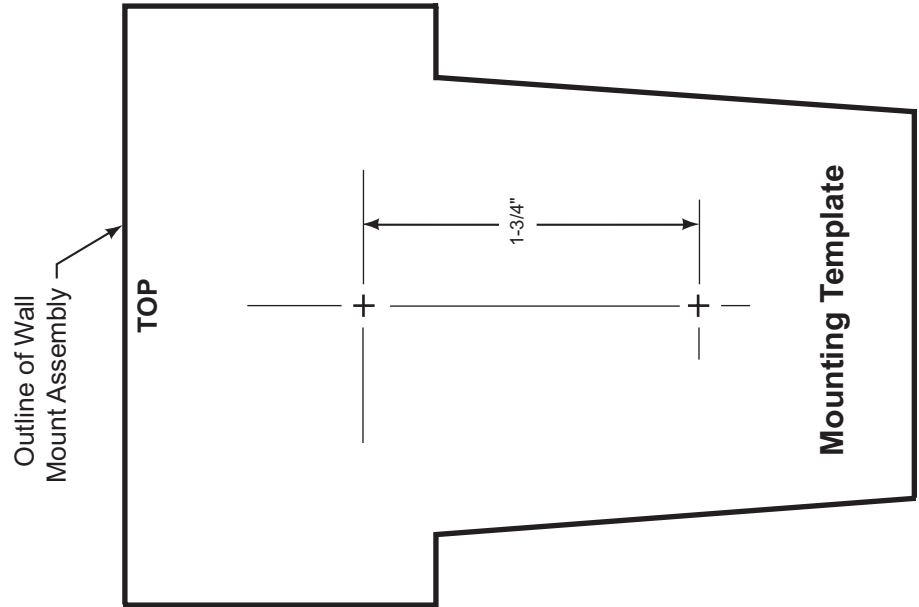


This page is intentionally blank


## Accessory Information

---


AC Power Adaptor  
(Base Unit)  
5-2698

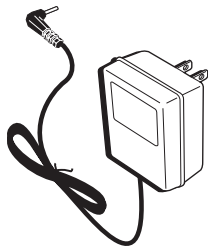


AC Power Adaptor  
(Cordless Handset)  
5-2697

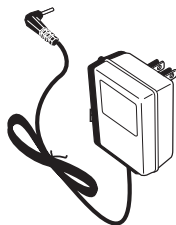

Replacement battery  
(NiMH for Base Unit)  
5-2670

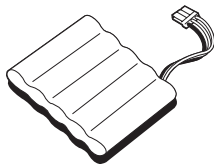

Replacement battery  
(NiMH for Cordless Handset)  
5-2699

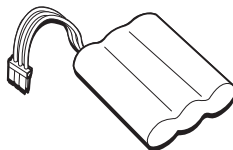

## Accessory Information

DESCRIPTION	MODEL NO.
AC power adaptor (for Base Unit)	5-2698
AC power adaptor (for Cordless Handset)	5-2697
Belt clip (for Cordless Handset)	5-2696
Replacement battery (NiMH for Base Unit)	5-2670
Replacement battery (NiMH for Cordless Handset)	5-2699

To place order, have your Visa, MasterCard, or Discover Card ready and call toll-free 1-800-338-0376.

A shipping and handling fee will be charged upon ordering.

It is required by law to collect appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent. Items are subject to availability.

Visit the RCA web site at [www.rca.com](http://www.rca.com)

---

Please do not send any products to the Indianapolis address listed in this manual or on the carton.  
This will only add delays in service for your product.

Thomson Inc.  
101 West 103rd Street  
Indianapolis, IN 46290

©2006 Thomson Inc.  
Trademark(s)® Registered  
Marca(s) Registrada(s)  
Model 25450  
06-05  
00006660 (English)  
00006661 (Espanol)  
Printed in China

